

LEXUS_V01.10 Daig Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Model	EcuInfo	Read Codes	Erase Codes	Live Data
Engine	○	●	●	●
ECT	○	●	●	●
ABS	○	●	●	●
EMPS	○	●	●	●
Free-Tronic	○	●	●	●
Air suspension	○	●	●	●
AHC	○	●	●	●
VGRS	○	●	●	●
EMS	○	●	●	●
Tire Pressure Monitor	○	●	●	●
SRS Airbag	○	●	●	●
BODY	○	●	●	●
Immobiliser	○	●	●	●
Tvss	○	●	●	●
Entry&Start	○	●	●	●
Occupant Detection	○	●	●	●
D-SEAT SW	○	※	※	●
AFS	○	●	●	●
Pre-Crash	○	●	●	●
D-Door Motor	○	●	●	●
Theft Deterrent	○	●	●	●
Air Conditioner	○	●	●	●
Combination Meter	○	※	※	●
Back Door	○	●	●	●
Driver Seat	○	※	※	●
Tilt&Telescopic	○	●	●	●
Mirror	○	※	※	●
Gateway	○	●	●	●
Passenger Door	○	●	●	●
Rear left Door	○	●	●	●
Rear right door	○	●	●	●
Sliding Roof	○	※	※	●
Driver Door	○	●	●	●
Master Switch	○	●	●	●
Rear Right Seat	○	●	●	●
Rear Left Seat	○	※	※	●
Rear Seat Switch	○	※	※	●
Steering Pad Switch	○	※	※	●
Clearance Sonar	○	●	●	●
Rain Sensor	○	※	※	●
Wiper	○	※	※	●
Combination Switch	○	※	※	●
Steering Lock	○	●	●	●
Passenger Seat	○	※	※	●
Retractable Hardtop	○	●	●	●

Main Body	○	●	●	●
P-Door Motor	○	●	●	●
RL-Door Motor	○	●	●	●
RR-Door Motor	○	●	●	●
HV Gateway	○	●	●	●
Night View	○	●	●	●
HL Autoleveling	○	●	●	●
ECM Gateway	○	●	●	●
ECB Gateway	○	●	●	●
WIL Gateway	○	●	●	●
Center Console Switch	○	※	※	●
Rear Console Switch	○	●	●	●
Front Left Seat A/C	○	●	●	●
Front Right Seat A/C	○	●	●	●
Rear left Seat A/C	○	●	●	●
Rear Right Seat A/C	○	●	●	●
Electric Power Control	○	●	●	●
Active Headrest R	○	●	●	●
Active Headrest L	○	●	●	●
Pre-Crash 2	○	●	●	●
Accessory Gateway	○	●	●	●
MIRROR R	○	●	●	●
MIRROR L	○	●	●	●
Navigation System	○	●	●	●
PM1 Gateway	○	●	●	●
Charging Control	○	●	●	●
Starting Control	○	●	●	●
PM2 Gateway	○	●	●	●
Remote Engine Starter	○	●	●	●
Gateway BEAN	○	●	●	●
Gateway CAN	○	●	●	●
Back DoorPW	○	●	●	●
Transmission Control	○	●	●	●
Parking Assist Monitor System	○	●	●	●
Power Source Control	○	●	●	●
EHPS	○	●	●	●
Four Wheel Drive	○	●	●	●
Stabilizer	○	●	●	●
Intelligent Parking Assist	○	●	●	●
Electric Parking Brake	○	●	●	●
Lane Keeping Assist	○	●	●	●
Front Stabilizer	○	●	●	●
Rear Stabilizer	○	●	●	●
ENGINE AND ECT	○	●	●	●
Cruise Control	○	●	●	●
ENGINE (LH Bank)	○	●	●	●
ENGINE (RH Bank)	○	●	●	●
HV Battery	○	●	●	●
Hybrid Control	○	●	●	●
Sequential M/T	○	●	●	●
Multi-Mode M/T	○	●	●	●
Stop And Go	○	●	●	●
Radar Cruise	○	●	●	●
Laser Cruise	○	●	●	●

E-ACM	○	●	●	●
Telematics	○	●	●	●
PPS	○	●	●	●
Advanced Parking Guidance System	○	●	●	●
FC	○	●	●	●
FCHV	○	●	●	●
EV	○	●	●	●
Battery	○	●	●	●
Front Right Door	○	※	※	●
Front Left Door	○	※	※	●
KDSS	○	●	●	●
Telematics	○	●	●	●
A/B	○	●	●	○
A/T	○	●	●	●
AMT	○	●	●	●
ARS	○	●	●	●
ASG	○	●	●	●
Bluetooth communication module	○	●	●	●
CAN bus gateway	○	●	●	○
CAN bus gateway V	○	●	●	○
CVT	○	●	●	●
DRS	○	●	●	●
eco IDLE	○	●	●	●
ECT(SIL)	○	●	●	●
EFI	○	●	●	●
EPS	○	●	●	●
FC	○	●	●	○
FCHV	○	●	●	○
HV	○	●	●	●
ITC	○	●	●	●
KFS	○	●	●	※
RL seat headrest ACT	○	●	●	●
ACT RR seat headrest	○	●	●	●
Pre-crash seat back seat RL	○	●	●	●
Pre-crash seat back seat RR	○	●	●	●
Active rear wing	○	●	●	●
Engine 2	○	●	●	●
Grille shutter	○	●	●	●
Cruise Control 2	○	※	※	●
Stop & Go	○	●	●	●
Diagnostics recorder	○	●	●	○
Panoramic View Monitor	○	●	●	●
Blind Spot Monitor Slave	○	●	●	●
Blind Spot Monitor Master	○	●	●	●
Plug-in control	○	●	●	●
Body / gateway	○	●	●	●
Multi-bus gateway	○	●	●	○
No.1 multi-bus monitoring	○	●	●	○
No.2 multi-bus monitoring	○	●	●	○
The motor-generator	○	●	●	●
Remote Security	○	●	●	●
Vehicle control	○	●	●	●
PKB electric	○	●	●	●