

LEXUS_V01.20 BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Area	Year	BMS
CT200h	EUROPE AND OTHER	Up to 2015	●
ES200	EUROPE AND OTHER	Up to 2015	●
ES300H	EUROPE AND OTHER	Up to 2015	●
GS450H	EUROPE AND OTHER	Up to 2015	●
HS250H	EUROPE AND OTHER	Up to 2015	●
IS300H	EUROPE AND OTHER	Up to 2015	●
LS600H	EUROPE AND OTHER	Up to 2015	●
RX400H	EUROPE AND OTHER	Up to 2015	●
RX450H	EUROPE AND OTHER	Up to 2015	●
CT200H	JAPAN	Up to 2015	●
GS300H	JAPAN	Up to 2015	●
GS450H	JAPAN	Up to 2015	●
HS250H	JAPAN	Up to 2015	●
IS300H	JAPAN	Up to 2015	●
LS600H	JAPAN	Up to 2015	●
NX300H	JAPAN	Up to 2015	●
RC300H	JAPAN	Up to 2015	●
RX450H	JAPAN	Up to 2015	●
CT200H	NORTH AMERICA	2011 - 2015	●
ES300H	NORTH AMERICA	2013 - 2015	●
GS450H	NORTH AMERICA	2007 - 2015	●
HS250H	NORTH AMERICA	2010 - 2012	●
LS600H	NORTH AMERICA	2008 - 2015	●
NX300H	NORTH AMERICA	2015	●
RX400H	NORTH AMERICA	2006 - 2008	●
RX450H	NORTH AMERICA	2010 - 2015	●