

TOYOTA_V01.20 BMS Function List (Note:For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

Vehicle	Area	Year	BMS
ALPHARD HV	EUROPE	Up to 2015	●
AURIS HV	EUROPE	Up to 2015	●
AVALON HV	EUROPE	Up to 2015	●
CAMRY HV	EUROPE	Up to 2015	●
HIGHLANDER HV	EUROPE	Up to 2015	●
NEL	EUROPE	Up to 2015	●
PREVIA HV	EUROPE	Up to 2015	●
PRIUS	EUROPE	Up to 2015	●
VELLFIRE HV	EUROPE	Up to 2015	●
YARIS HV	EUROPE	Up to 2015	●
ALPHARD HV	JAPAN	Up to 2015	●
AQUA	JAPAN	Up to 2015	●
CAMRY HV	JAPAN	Up to 2015	●
COROLLA	JAPAN	Up to 2015	●
CROWN	JAPAN	Up to 2015	●
DYNA 200	JAPAN	Up to 2015	●
ESTIMA HV	JAPAN	Up to 2015	●
FIELDER HV	JAPAN	Up to 2015	●
HARRIER HV	JAPAN	Up to 2015	●
KLUGER HV	JAPAN	Up to 2015	●
NOAH HV	JAPAN	Up to 2015	●
PRIUS	JAPAN	Up to 2015	●
QUICKDELIVERY	JAPAN	Up to 2015	●
SAI	JAPAN	Up to 2015	●
TOYOACE	JAPAN	Up to 2015	●
VELLFIRE HV	JAPAN	Up to 2015	●
VITZ	JAPAN	Up to 2015	●
VOXY HV	JAPAN	Up to 2015	●
AVALON HV	NORTH AMERICA	2013 - 2015	●
CAMRY HV	NORTH AMERICA	2007 - 2015	●
HIGHLANDER HV	NORTH AMERICA	2006 - 2015	●
PRIUS	NORTH AMERICA	2001 - 2015	●