# CR MAX



# **CITROEN**



CITROEN_VO1.	25 BMS Function List (Note:For reference only)
NOTES:	
• This function is supported.	
※ This function may be supported	l, which depends on the actual condition of the vehicle.
O This function is not supported	1.
▲ This function is the new featu	ure in this version.
Vehicle	BMS
BERLINGO (B9)	•
C3 (A51)	•
C3 (PICASSO)	•
C3 (XR)	•
C4	•
C4 (CACTUS)	•
C4 (PICASSO)	•
C4 (SEDAN)	•
C4L	•
C5 (X7)	•
C6	•
DS3	•
DS4	

•

•

•

•

•

DS5

DS6

DS 5LS

DS5 (Hybird 4)

JUMPY (DISPATCH)

### CITROEN\_VO1.25 BLD Function List (Note:For reference only)

#### NOTES:

C8 (CAN)

ESP8BOSCH

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

※ This function may be	supported, which depends o	on the actual condition of the vehicle.
O This function is not	supported.	
▲ This function is the	new feature in this version	on.
Vehicle	System Type	BLD
BERLINGO (B9)	ABS81	•
BERLINGO (B9)	ESP8. 1	•
BERLINGO 2	ABS81	•
BERLINGO 2	ESP81	•
BERLINGO Electric (B9E)	ABS81	•
BERLINGO Electric (B9E)	ESP8. 1	•
C-ELYSEE	ABSMK100	•
C-ELYSEE	ESPMK100	•
C-QUATRE 4	ESP8. 1	•
C-QUATRE 5	ESP8. 1	•
C-TRIOMPHE	ESP8. 1	•
C3 (A51)	ABSMK70_1	•
C3 (A51)	ABSMK100	•
C3 (A51)	ESPMK60_0	•
C3 (A51)	ESPMK100	•
C3 AIRCROSS (Ai58)	ABSMK70_1	•
C3 AIRCROSS (Ai58)	ESPMK60_0	•
C3 (Ai58)	ABSMK70 1	•
C3 (Ai58)	ESPMK60_0	•
C3 (PICASSO) (A58)	ABSMK70 1	•
C3 (PICASSO) (A58)	ABSMK100	•
C3 (PICASSO) (A58)	ESPMK60_0	•
C3 (PICASSO) (A58)	ESPMK100	•
C3 (PICASSO) (Ai58)	ABSMK70 1	•
C3 (PICASSO) (Ai58)	ESPMK60_0	•
C4	ABS8_BOSCH	•
C4	ABS81	•
C4	ESP8BOSCH	•
C4	ESP8. 1	•
C4 (PICASSO)	ABS8_BOSCH	•
C4 (PICASSO)	ABS81	•
C4 (PICASSO)	ESP8BOSCH	•
C4 (PICASSO)	ESP8. 1	•
C4 (PICASSO) (B78)	ESP90	•
C4 (SEDAN)	ABS8_BOSCH	•
C4 (SEDAN)	ABS81	•
C4 (SEDAN)	ESP8BOSCH	•
C4 (SEDAN)	ESP8. 1	•
C4 (B7)	ABS81	•
C4 (B7)	ESP8. 1	•
C4L (B7)	ABS81	•
C4L (B7)	ESP8. 1	•
C4L (B7)	ESP8. 1	•
C6 (X7)	ESP8. 1	•
C6	ESPEBC440	•
CO	ESI EDU44U	

C8 (CAN)	ESP8. 1	•
DS 5LS	ESP8. 1	•
DS 6	ESP8. 1	•
DS3	ESPMK60_0	•
DS3	ESPMK100	•
DS4	ABS81	•
DS4	ESP8. 1	•
DS5	ESP8. 1	•
DS5 (Hybird 4)	ESP8. 1	•
JUMPER 3	ABS80	•
JUMPER 3	ASR80	•
JUMPER 3 (MiniBus)	ABS80	•
JUMPER 3 (MiniBus)	ASR80	•
JUMPY 3	ABS8_BOSCH	•
JUMPY 3	ABS81	•
JUMPY 3	ESP8BOSCH	•
JUMPY 3	ESP8. 1	•

# CITROEN\_VO1.10 Daig Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	System Name	EcuInfo.	Read Codes	Erase Codes	LiveData
BERLINGO	Engine Control Moduel	•	Oues	•	•
BERLINGO	Anti-lock Brake System	•	•	•	•
BERLINGO	Airbag	•	•	•	•
BERLINGO	Control Panel	•	•	•	•
BERLINGO	Built-in System Interface	•	•	•	•
BERLINGO	Parking Assistance Module	•	•	•	•
BERLINGO	Steering Wheel With Fixed Central Control	•	•	•	•
BERLINGO	Rain/Brightness Sensor	•	•	•	•
BERLINGO	Additional Heating	•	•	•	•
BERLINGO	Multifunction Display A	•	•	•	•
BERLINGO	Service Module	•	•	•	•
BERLINGO	CD Player	•	•	•	•
BERLINGO	Radio	•	•	•	•
BERLINGO	Alarm	•	•	•	•
BERLINGO (B9)	Engine Control Moduel	•	•	•	•
BERLINGO (B9)	Auto Gearbox	•	•	•	•
BERLINGO (B9)	Anti-lock Brake System	•	•	•	•
BERLINGO (B9)	Airbag	•	•	•	•
BERLINGO (B9)	Control Panel	•	•	•	•
BERLINGO (B9)	Built-in System Interface (BSI)	•	•	•	•
BERLINGO (B9)	Air Conditioning	•	•	•	•
BERLINGO (B9)	Passenger Compartment Air Heanting Resistor	•	•	•	•
BERLINGO (B9)	Engine Relay Unit	•	•	•	•
BERLINGO (B9)	Trailer Relay Unit	•	•	•	•
BERLINGO (B9)	Electric Machine Management	•	•	•	•
BERLINGO (B9)	Electric Power Steering	•	•	•	•
BERLINGO (B9)	Electric Vehicle Management	•	•	•	•
BERLINGO (B9)	Steering Wheel With Fixed Central Control	•	•	•	•
BERLINGO (B9)	Parking Assistance Module	•	•	•	•
BERLINGO (B9)	Rain/Brightness Sensor	•	•	•	•
BERLINGO (B9)	Display/Telematics	•	•	•	•
BERLINGO (B9)	Multifunction Display	•	•	•	•
BERLINGO (B9)	Battery Change Status Unit	•	•	•	•
BERLINGO (B9)	Multiplexed Additive Adding Pump	•	•	•	•
BERLINGO (B9)	Hands-free Control Unit	•	•	•	•
BERLINGO (B9)	High Frequency Receiver	•	•	•	•
BERLINGO (B9)	Deflation Detection	•	•	•	•
BERLINGO (B9)	Bodywork Conversion Unit	•	•	•	•
BERLINGO (B9)	Anti-slip Mode Selector	•	•	•	•
BERLINGO (B9)	Service Module	•	•	•	•
BERLINGO (B9)	Traction Battery	•	•	•	•
BERLINGO (B9)	Onboard Charger Of The Traction Battery	•	•	•	•
BERLINGO (B9)	Traction Battery Cells Management 1	•	•	•	•
BERLINGO (B9)	Traction Battery Cells Management 2	•	•	•	•
BERLINGO (B9)	Traction Battery Cells Management 3	•	•	•	•
BERLINGO (B9)	Traction Battery Cells Management 4	•	•	•	•
BERLINGO (B9)	Traction Battery Cells Management 5	•	•	•	•
BERLINGO (B9)	Traction Battery Cells Management 7	•	•	•	•
BERLINGO (B9)	Traction Battery Cells Management 8	•	•	•	•
BERLINGO (B9)	Traction Battery Cells Management 9	•	•	•	•
D21011100 (D3)	Traction Dailor, Corres management J		1-	1-	<u> </u>

DEDI INCO (DO)	T D C 11 M 10	I <b>a</b>	I_	1_	
	Traction Battery Cells Management 10	•	•	•	•
BERLINGO (B9)	CD Player	•	•	•	•
` ′	Radio	•	•	•	•
	Alarm	•	•	•	•
	Electric Machine Management	•	•	•	•
	Electric Vehicle Management	•	•	•	•
C-ZERO	ASC	•	•	•	•
C-ZERO	ORC	•	•	•	•
C-ZERO	Instrument Cluster	•	•	•	•
C-ZERO	Air Conditioning	•	•	•	•
C-ZERO	Electric Power Steering	•	•	•	•
C-ZERO	Steering Wheel Angle Sensor	•	•	•	•
C-ZERO	Gateway Wiring Housing	•	•	•	•
C-ZERO	Direct Voltage Transformer	•	•	•	•
C-ZERO	Onboard Charger Of The Traction Battery	•	•	•	•
C-ZERO	Traction Battery	•	•	•	•
C-ZERO	Traction Battery Cells Management 1	•	•	•	•
C-ZERO	Traction Battery Cells Management 2	•	•	•	•
C-ZERO	Traction Battery Cells Management 3	•	•	•	•
C-ZERO	Traction Battery Cells Management 4	•	•	•	•
C-ZERO	Traction Battery Cells Management 5	•	•	•	•
C-ZERO	Traction Battery Cells Management 7	•	•	•	•
C-ZERO	Traction Battery Cells Management 8	•	•	•	•
C-ZERO	Traction Battery Cells Management 9	•	•	•	•
C-ZERO	Traction Battery Cells Management 10	•	•	•	•
C-ZERO	Traction Battery Cells Management 11	•	•	•	•
C-ZERO	Service Module	•	•	•	•
C-ZERO	Radio	•	•	•	•
C1	Engine Control Moduel	•	•	•	•
	Manual Gearbox	•	•	•	•
C1	ABS/ESP	•	•	•	•
	Airbag	•	•	•	•
C1	Electric Power Steering	•	•	•	•
C1	Immobiliser	•	•	•	•
C1 (B4)	Engine Control Moduel	•	•	•	•
C1 (B4)		•	•	•	•
C1 (B4)	Auto Gearbox	•	•	•	•
	Anti-lock Brake System	_	_	_	_
C1 (B4)	Airbag	•	•	•	•
C1 (B4)	Instrument Cluster	•	•	•	•
	Air Conditioning	•	•	•	•
	Electric Power Steering	•	•	•	•
C1 (B4)	Engine immobiliser/hands free starting access electric module	•	•	•	•
C1 (B4)	Start/Stop Control	•	•	•	•
C1 (B4)	Multifunction Display	•	•	•	•
C2	Engine Control Moduel	•	•	•	•
C2	Manual Gearbox	•	•	•	•
C2	Anti-lock Brake System	•	•	•	•
C2	Airbag	•	•	•	•
C2	Control Panel	•	•	•	•
C2	Built-in System Interface (BSI)	•	•	•	•
C2	Air Conditioning	•	•	•	•
C2	Electric Power Steering	•	•	•	•
C2	Steering Wheel With Fixed Central Control	•	•	•	•
C2	Engine Relay Unit	•	•	•	•
	Trailer Relay Unit	•	•	•	•
C2	Parking Assistance Module	•	•	•	•
C2	Hands-free Control Unit	•	•	•	•
	Start/Stop Control	•	•	•	•
02	ovar v, ovop control	<u> </u>	<u> </u>	<u> </u>	<u> </u>

CO	Dain/Prightness Conser				
C2	Rain/Brightness Sensor	•	•	•	•
C2	High Frequency Receiver	_		_	•
C2	Multifunction Display C	•	•	•	•
C2	Telematic Unit	•	•	•	•
C2	CD Player	•	•	•	•
C2	Radio	•	•	•	•
C2	Alarm	•	•	•	•
C2 (CHINA)	Engine Control Moduel	•	•	•	•
C2 (CHINA)	Auto Gearbox	•	•	•	•
C2 (CHINA)	Anti-lock Brake System	•	•	•	•
C2 (CHINA)	Airbag	•	•	•	•
C2 (CHINA)	Instrument Cluster	•	•	•	•
C2 (CHINA)	Built-in System Interface	•	•	•	•
C2 (CHINA)	Air Conditioning	•	•	•	•
C2 (CHINA)	Steering Wheel With Fixed Central Control	•	•	•	•
C3	Engine Control Moduel	•	•	•	•
C3	Auto Gearbox	•	•	•	•
C3	Anti-lock Brake System	•	•	•	•
C3	Airbag	•	•	•	•
C3	Control Panel	•	•	•	•
C3	Built-in System Interface	•	•	•	•
C3	Air Conditioning	•	•	•	•
C3	Electric Power Steering	•	•	•	•
C3	Steering Wheel With Fixed Central Control	•	•	•	•
C3	Parking Assistance Module	•	•	•	•
C3	Diesel Additive Function	•	•	•	•
C3	Rain/Brightness Sensor	•	•	•	•
C3	Multifunction Display A	•	•	•	•
C3	CD Player	•	•	•	•
C3	Radio	•	•	•	•
C3	Alarm	•	•	•	•
C3 (A51)	Engine Control Moduel	•	•	•	•
C3 (A51)	Auto Gearbox	•	•	•	•
C3 (A51)	Anti-lock Brake System	•	•	•	•
C3 (A51)	Airbag	•	•	•	•
C3 (A51)		_	ا ا	-	1 -
CO (VOI)	Control Panol		•		•
C2 (AE1)	Control Panel	•	•	•	•
C3 (A51)	Built-in System Interface	•	•	•	•
C3 (A51)	Built-in System Interface Air Conditioning	•	•	•	•
C3 (A51) C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit	•	•	•	•
C3 (A51) C3 (A51) C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit	•	•	•	•
C3 (A51) C3 (A51) C3 (A51) C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering	•	•	•	•
C3 (A51) C3 (A51) C3 (A51) C3 (A51) C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control	•	•	•	•
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump	•	•	•	•
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel	•	• • • • • • • • • • • • • • • • • • •	•	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED	• • • • • • • • • • • • • • • • • • •	•	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel	•	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor			• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics				• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics Multifunction Display			• • • • • • • • • • • • • • • • • • •	• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics Multifunction Display Service Module				• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics Multifunction Display Service Module Radio				• • • • • • • • • • • • • • • • • • •
C3 (A51)	Built-in System Interface Air Conditioning Engine Relay Unit Trailer Relay Unit Electric Power Steering Steering Wheel With Fixed Central Control Multiplexed Diesel Additive Pump Driver Door Control Panel Seat Belt Reminder LED Battery Change Status Unit Hands-free Control Unit High Frequency Receiver Driver School Module Rain/Brightness Sensor Parking Assistance Module Display/Telematics Multifunction Display Service Module Radio Alarm				

(		_	_		
C3 (AIRCROSS)	Anti-lock Brake System	•	•	•	•
C3 (AIRCROSS)	Airbag	•	•	•	•
C3 (AIRCROSS)	Control Panel	•	•	•	•
C3 (AIRCROSS)	Built-in System Interface	•	•	•	•
C3 (AIRCROSS)	Air Conditioning	•	•	•	•
C3 (AIRCROSS)	Electric Power Steering	•	•	•	•
C3 (AIRCROSS)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (AIRCROSS)	Parking Assistance Module	•	•	•	•
C3 (AIRCROSS)	Rain/Brightness Sensor	•	•	•	•
C3 (AIRCROSS)	Trailer Relay Unit	•	•	•	•
C3 (AIRCROSS)	Stolen Vehicle Location Control Unit	•	•	•	•
C3 (AIRCROSS)	Telematic Unit	•	•	•	•
C3 (AIRCROSS)	Service Module	•	•	•	•
C3 (AIRCROSS)	Radio	•	•	•	•
C3 (AIRCROSS)	Alarm	•	•	•	•
C3 (NEW LOOK)	Engine Control Moduel	•	•	•	•
C3 (NEW LOOK)	Auto Gearbox	•	•	•	•
C3 (NEW LOOK)	Anti-lock Brake System	•	•	•	•
C3 (NEW LOOK)	Airbag	•	•	•	•
C3 (NEW LOOK)	Control Panel	•	•	•	•
C3 (NEW LOOK)	Built-in System Interface	•	•	•	•
C3 (NEW LOOK)	Air Conditioning	•	•	•	•
C3 (NEW LOOK)	Electric Power Steering	•	•	•	•
C3 (NEW LOOK)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (NEW LOOK)	Parking Assistance Module	•	•	•	•
C3 (NEW LOOK)	Engine Relay Unit	•	•	•	•
C3 (NEW LOOK)	Hands-free Control Unit	•	•	•	•
C3 (NEW LOOK)	Rain/Brightness Sensor	•	•	•	•
C3 (NEW LOOK)	Multifunction Display C	•	•	•	•
C3 (NEW LOOK)	Telematic RT3	•	•	•	•
C3 (NEW LOOK)	CD Player	•	•	•	•
C3 (NEW LOOK)	Radio	•	•	•	•
C3 (NEW LOOK)	Alarm	•	•	•	•
C3 (PLURIEL)	Engine Control Moduel	•	•	•	•
C3 (PLURIEL)	Manual Gearbox	•	•	•	•
C3 (PLURIEL)	Anti-lock Brake System	•	•	•	•
C3 (PLURIEL)	Airbag	•	•	•	•
C3 (PLURIEL)	Control Panel	•	•	•	•
C3 (PLURIEL)	Built-in System Interface	•	•	•	•
C3 (PLURIEL)	Air Conditioning	•	•	•	•
C3 (PLURIEL)	Electric Power Steering	•	•	•	•
C3 (PLURIEL)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (PLURIEL)	Parking Assistance Module	•	•	•	•
	Engine Relay Unit	•	•	•	•
C3 (PLURIEL)	Hands-free Control Unit	•	•	•	•
C3 (PLURIEL)	Rain/Brightness Sensor	•	•	•	•
C3 (PLURIEL)	Multifunction Display C	•	•	•	•
	Telematic RT3	•	•	•	•
C3 (PLURIEL)	CD Player	•	•	•	•
C3 (PLURIEL)	Radio	•	•	•	•
C3 (PICASSO)	Engine Control Moduel	•	•	•	•
C3 (PICASSO)	Auto Gearbox	•	•	•	•
C3 (PICASSO)	Anti-lock Brake System	•	•	•	•
C3 (PICASSO)		•	•	•	•
	Airbag Control Popol	_	_	_	
C3 (PICASSO)	Control Panel	•	•	•	•
C3 (PICASSO)	Built-in System Interface (BSI)	•	•	•	•
C3 (PICASSO)	Air Conditioning	•	•	•	•
C3 (PICASSO)	Electric Power Steering	•	•	•	•

C3 (DICAGO)	Stooring Whool With Fired Control Control				
	Steering Wheel With Fixed Central Control	•	•	•	•
	Parking Assistance Module	•	•	_	•
	Engine Relay Unit	•	•	•	•
	Trailer Relay Unit	•	•	•	•
	Driver Door Control Panel	•	•	•	•
	Multiplexed Diesel Additive Pump	•	•	•	•
	High Frequency Receiver	•	•	•	•
	Rain/Brightness Sensor	•	•	•	•
	Hands-free Control Unit	•	•	•	•
	Battery Change Status Unit	•	•	•	•
	Seat Belt Reminder LED	•	•	•	•
	Service Module	•	•	•	•
	Multifunction Display	•	•	•	•
C3 (PICASSO)	Display/Telematics	•	•	•	•
C3 (PICASSO)	Alarm	•	•	•	•
	Radio	•	•	•	•
	Engine Control Moduel	•	•	•	•
C3 (XR)	Auto Gearbox	•	•	•	•
C3 (XR)	Anti-lock Brake System	•	•	•	•
C3 (XR)	Airbag	•	•	•	•
C3 (XR)	Control Panel	•	•	•	•
C3 (XR)	Built-in System Interface (BSI)	•	•	•	•
C3 (XR)	Electric Steering Lock	•	•	•	•
C3 (XR)	Electric Power Steering	•	•	•	•
C3 (XR)	Steering Wheel With Fixed Central Control	•	•	•	•
C3 (XR)	Parking Assistance Module	•	•	•	•
C3 (XR)	Hands-free Control Unit	•	•	•	•
C3 (XR)	Electric Key Reader	•	•	•	•
C3 (XR)	Battery Charge Status Unit	•	•	•	•
C3 (XR)	Anti-slip Mode Selector	•	•	•	•
C3 (XR)	Multiplexed Control Panel	•	•	•	•
C3 (XR)	Voltage Retaining Device	•	•	•	•
C3 (XR)	Multifunction Display	•	•	•	•
C3 (XR)	Telematic Unit	•	•	•	•
C3 (XR)	Service Module	•	•	•	•
C3 (XR)	Radio	•	•	•	•
	Engine Control Moduel	•	•	•	•
	Auto Gearbox	•	•	•	•
	Anti-lock Brake System	•	•	•	•
	Electric Secondary Brake	•	•	•	•
	Airbag	•	•	•	•
	Control Panel	•	•	•	•
	Built-in System Interface	•	•	•	•
	Air Conditioning	•	•	•	•
	Electric Power Steering	•	•	•	•
	Steering Wheel With Fixed Central Control	•	•	•	•
	Engine Relay Unit	•	•	•	•
	Diesel Additive Function	•	•	•	•
	Unit Rev Counter	•	•	•	•
	Driver Door Control Panel	•	•	•	•
	Passenger Door Module	•	•	•	•
	Driver Seat Memorizing Unit	•	•	•	•
		•	•	•	•
	Parking Assistance Module	•	•		•
	Hands-free Control Unit		_	•	
	Rain/Brightness Sensor	•	•	•	•
	Directional Headlamps	•	•	•	•
	High Frequency Receiver	•	•	•	•
C4	Lane Departure Warning System	•	•	•	•

04	I. 1' D 1 II .'		I_	-	
C4	Light Pack Unit	•	•	•	•
C4	Pneumatic Suspension	•	•	•	•
C4	Trailer Relay Unit	•	•	•	•
C4	Windscreen Wiper	•	•	•	•
	Multifunction Display	•	•	•	•
C4	Display/Telematics	•	•	•	•
	Battery Change Status Unit	•	•	•	•
	Multiplexed Additive Adding Pump	•	•	•	•
C4	Service Module	•	•	•	•
C4	Deflation Detection	•	•	•	•
C4	Audio Amplifier	•	•	•	•
C4	Driver School Module	•	•	•	•
C4	CD Player	•	•	•	•
C4	Radio	•	•	•	•
C4	Alarm	•	•	•	•
C4 (AIRCROSS)	Engine Control Moduel	•	•	•	•
C4 (AIRCROSS)	Auto Gearbox	•	•	•	•
C4 (AIRCROSS)	Anti-lock Brake System	•	•	•	•
C4 (AIRCROSS)	Airbag	•	•	•	•
C4 (AIRCROSS)	Control Panel	•	•	•	•
C4 (AIRCROSS)	Air Conditioning	•	•	•	•
C4 (AIRCROSS)	Electric Power Steering	•	•	•	•
C4 (AIRCROSS)	Steering Wheel Angle Sensor	•	•	•	•
C4 (AIRCROSS)	Parking Assistance Module	•	•	•	•
C4 (AIRCROSS)	Start/Stop Control	•	•	•	•
C4 (AIRCROSS)	Starting Authorisation	•	•	•	•
C4 (AIRCROSS)	Locking And Immobiliser Control Module	•	•	•	•
C4 (AIRCROSS)	Rear Final Drive Piloted Clutch	•	•	•	•
C4 (AIRCROSS)	Navigation	•	•	•	•
C4 (AIRCROSS)	Radio	•	•	•	•
C4 (CACTUS)	Engine Control Moduel	•	•	•	•
C4 (CACTUS)	Auto Gearbox	•	•	•	•
C4 (CACTUS)	Anti-lock Brake System	•	•	•	•
C4 (CACTUS)	Airbag	•	•	•	•
C4 (CACTUS)	Control Panel	•	•	•	•
C4 (CACTUS)	Built-in System Interface (BSI)	•	•	•	•
C4 (CACTUS)	Air Conditioning	•	•	•	•
C4 (CACTUS)	Diesel Additive Function	•	•	•	•
C4 (CACTUS)	Electric Power Steering	•	•	•	•
C4 (CACTUS)	Steering Wheel With Fixed Central Control	•	•	•	•
C4 (CACTUS)	Parking Assistance Module	•	•	•	•
C4 (CACTUS)	Seat Belts Not Fastened LED Unit	•	•	•	•
C4 (CACTUS)	Trailer Relay Unit	•	•	•	•
	Rain/Brightness Sensor	•	•	•	•
	Battery Charge Status Unit	•	•	•	•
	Voltage Retaining Device	•	•	•	•
	Multiplexed Control Panel	•	•	•	•
	Service Module	•	•	•	•
C4 (CACTUS)	External CD Player	•	•	•	•
C4 (CACTUS)	Telematic Unit	•	•	•	•
C4 (CACTUS)	Touch Screen	•	•	•	•
C4 (PICASSO)	Engine Control Moduel	•	•	•	•
C4 (PICASSO)	Auto Gearbox	•	•	•	•
					•
C4 (PICASSO)	Anti-lock Brake System	•	•	•	
C4 (PICASSO)	Electric Secondary Brake	•	•	•	•
	Airbag	•	•	•	•
C4 (PICASSO)	Control Panel	•	•	•	•
C4 (PICASSO)	Built-in System Interface	•	•	•	•

a. (p. a.		_	1_	_	_
	Air Conditioning	•	•	•	•
C4 (PICASSO)	Engine Relay Unit	•	•	•	•
C4 (PICASSO)	Trailer Relay Unit	•	•	•	•
C4 (PICASSO)	Diesel Additive Function	•	•	•	•
C4 (PICASSO)	Electric Power Steering	•	•	•	•
C4 (PICASSO)	Electric Steering Lock	•	•	•	•
C4 (PICASSO)	Steering Wheel With Fixed Central Control	•	•	•	•
C4 (PICASSO)	Parking Assistance Module	•	•	•	•
C4 (PICASSO)	Driver Door Control Panel	•	•	•	•
C4 (PICASSO)	Passenger Door Module	•	•	•	•
C4 (PICASSO)	Driver Seat Memorizing Unit	•	•	•	•
C4 (PICASSO)	Right Reversible Seat Belt Reel	•	•	•	•
C4 (PICASSO)	Left Reversible Seat Belt Reel	•	•	•	•
C4 (PICASSO)	Body Control Module	•	•	•	•
	·				
C4 (PICASSO)	Hands-free Control Unit	•	•	•	•
C4 (PICASSO)	Multiplexed Additive Adding Pump	•	•	•	•
	Electric Key Reader	•	•	•	•
C4 (PICASSO)	Battery Change Status Unit	•	•	•	•
C4 (PICASSO)	Rain/Brightness Sensor	•	•	•	•
C4 (PICASSO)	Directional Headlamps	•	•	•	•
C4 (PICASSO)	Unit Rev Counter	•	•	•	•
C4 (PICASSO)	Deflation Detection	•	•	•	•
C4 (PICASSO)	Pneumatic Suspension	•	•	•	•
C4 (PICASSO)	Driver School Module	•	•	•	•
C4 (PICASSO)	High Frequency Receiver	•	•	•	•
C4 (PICASSO)	Lane Departure Warning System	•	•	•	•
C4 (PICASSO)	Light Pack Unit	•	•	•	•
C4 (PICASSO)	Multifunction Camera	•	•	•	•
		_			_
C4 (PICASSO)	Vehicle Distance Assistance	•	•	•	•
C4 (PICASSO)	Multiplexed Control Panel	•	•	•	•
	Signalling Fuse Box	•	•	•	•
C4 (PICASSO)	Supply Protection And Management Unit	•	•	•	•
C4 (PICASSO)	Windscreen Wiper	•	•	•	•
C4 (PICASSO)	Display/Telematics	•	•	•	•
C4 (PICASSO)	Multifunction Display	•	•	•	•
C4 (PICASSO)	Service Module	•	•	•	•
C4 (PICASSO)	Audio Amplifier	•	•	•	•
C4 (PICASSO)	CD Player	•	•	•	•
C4 (PICASSO)	Radio	•	•	•	•
C4 (PICASSO)	Alarm	•	•	•	•
C4 (PICASSO)	Siren	•	•	•	•
C4 (SEDAN)	Engine Control Moduel	•	•	•	•
C4 (SEDAN)	Auto Gearbox	•	•	•	•
C4 (SEDAN)					
	Anti-lock Brake System	•	•	•	•
	Electric Secondary Brake	•	•	•	•
	Airbag	•	•	•	•
C4 (SEDAN)	Control Panel	•	•	•	•
C4 (SEDAN)	Built-in System Interface	•	•	•	•
C4 (SEDAN)	Air Conditioning	•	•	•	•
C4 (SEDAN)	Engine Relay Unit	•	•	•	•
C4 (SEDAN)	Trailer Relay Unit	•	•	•	•
C4 (SEDAN)	Diesel Additive Function	•	•	•	•
C4 (SEDAN)	Electric Power Steering	•	•	•	•
C4 (SEDAN)	Steering Wheel With Fixed Central Control	•	•	•	•
C4 (SEDAN)	Parking Assistance Module	•	•	•	•
C4 (SEDAN)	morrowano mondro	_	-	-	
OT ODDAM	Driver Door Control Panel	•			
	Driver Door Control Panel	•	•	•	•
C4 (SEDAN)	Driver Door Control Panel Passenger Door Module Driver Seat Memorizing Unit	•	•	•	•

C4 (SEDAN)	Hands-free Control Unit	•	•	•	•
	Rain/Brightness Sensor	•	•	•	•
	Multiplexed Additive Adding Pump	•	•	•	•
	Directional Headlamps	•	•	•	•
C4 (SEDAN)	Driver School Module	•	•	•	•
C4 (SEDAN)	High Frequency Receiver	•	•	•	•
C4 (SEDAN)	Lane Departure Warning System	•	•	•	•
C4 (SEDAN)	Light Pack Unit	•	•	•	•
	Pneumatic Suspension	•	•	•	•
C4 (SEDAN)	*		•	•	•
C4 (SEDAN) C4 (SEDAN)	Deflation Detection Unit Rev Counter	•			•
		•	•	•	
C4 (SEDAN)	Display/Telematics	•	•	•	•
C4 (SEDAN)	Multifunction Display	•	•	•	•
C4 (SEDAN)	Service Module	•	•	•	•
C4 (SEDAN)	Battery Change Status Unit	•	•	•	•
	Audio Amplifier	•	•	•	•
	Windscreen Wiper	•	•	•	•
C4 (SEDAN)	CD Player	•	•	•	•
	Radio	•	•	•	•
	Alarm	•	•	•	•
C4L	Engine Control Moduel	•	•	•	•
C4L	Auto Gearbox	•	•	•	•
C4L	Anti-lock Brake System	•	•	•	•
C4L	Electric Secondary Brake	•	•	•	•
C4L	Airbag	•	•	•	•
C4L	Control Panel	•	•	•	•
C4L	Air Conditioning	•	•	•	•
C4L	Engine Relay Unit	•	•	•	•
C4L	Trailer Relay Unit	•	•	•	•
C4L	Electric Power Steering	•	•	•	•
C4L	Electric Steering Lock	•	•	•	•
C4L	Steering Wheel With Fixed Central Control	•	•	•	•
C4L	Driver Door Control Panel	•	•	•	•
C4L	Driver Seat Memorizing Unit	•	•	•	•
C4L	Seat Belts Not Fastened LED Unit	•	•	•	•
C4L	Parking Assistance Module	•	•	•	•
C4L	Directional Headlamps	•	•	•	•
C4L	Matrix Screen Integral To The Instrument Panel	•	•	•	•
C4L	Multiplexed Control Panel	•	•	•	•
C4L	Battery Change Status Unit	•	•	•	•
C4L	Electric Key Reader	•	•	•	•
	Service Module	•	•	•	•
C4L	Supply Protection And Management Unit	•	•	•	•
C4L	Monitoring Of The Blind Spot	•	•	•	•
C4L	Driver School Module	•	•	•	•
C4L	Rain/Brightness Sensor	•	•	•	•
C4L	Lane Departure Warning System	•	•	•	•
C4L	Deflation Detection	•	•	•	•
C4L	Multiplexed Additive Adding Pump	•	•	•	•
C4L	Display/Telematics	•	•	•	•
C4L	Multifunction Display	•	•	•	•
C4L	Audio Amplifier	•	•	•	•
C4L C4L	Radio	•	•	•	•
			•	•	•
	Alarm Engine Control Medical	•	_		
	Engine Control Moduel	•	•	•	•
C5	Auto Gearbox	•	•	•	•
C5 C5	Airbag	•	•	•	•
III la	Control Panel	•	•	•	•

C5	Built-in System Interface	•	•	•	•
C5	Air Conditioning	•	•	•	•
C5	Steering Wheel With Fixed Central Control	•	•	•	•
C5	Parking Assistance Module	•	•	•	•
C5	Rain/Brightness Sensor	•	•	•	•
C5		•	•	•	•
	Multifunction Display A	•	•	•	•
C5 C5	ADDGO 2	_			_
	ADDITIF FAP	•	•	•	•
C5	MDP PASSAG	•	•	•	•
C5	MDP CONDUCT	•	•	•	•
C5	CD Player	•	•	•	•
C5	Radio	•	•	•	•
C5	Alarm	•	•	•	•
C5 (NEW)	Engine Control Moduel	•	•	•	•
C5 (NEW)	Auto Gearbox	•	•	•	•
C5 (NEW)	Anti-lock Brake System	•	•	•	•
C5 (NEW)	Airbag	•	•	•	•
C5 (NEW)	Built-in System Interface	•	•	•	•
C5 (NEW)	Air Conditioning	•	•	•	•
C5 (NEW)	Engine Relay Unit	•	•	•	•
C5 (NEW)	Electric Power Steering	•	•	•	•
C5 (NEW)	Steering Wheel With Fixed Central Control	•	•	•	•
C5 (NEW)	Parking Assistance Module	•	•	•	•
C5 (NEW)	Hands-free Control Unit	•	•	•	•
C5 (NEW)	Rain/Brightness Sensor	•	•	•	•
C5 (NEW)	Directional Headlamps	•	•	•	•
C5 (NEW)	Deflation Detection	•	•	•	•
C5 (NEW)	Ecotech Suspension	•	•	•	•
C5 (NEW)	Multifunction Display C	•	•	•	•
C5 (NEW)	Telematic RT3	•	•	•	•
C5 (NEW)	ADDGO 3	•	•	•	•
C5 (NEW)	MDP CONDUCT	•	•	•	•
C5 (NEW)	MDP PASSAG	•	•	•	•
C5 (NEW)	CD Player	•	•	•	•
C5 (NEW)	Radio	•	•	•	•
C5 (NEW)	Alarm	•	•	•	•
C5 (X7)	Engine Control Moduel	•	•	•	•
C5 (X7)	Auto Gearbox	•	•	•	•
C5 (X7)	Anti-lock Brake System	•	•	•	•
C5 (X7)	Electric Secondary Brake	•	•	•	•
C5 (X7)	Airbag	•	•	•	•
C5 (X7)	Control Panel	•	•	•	•
C5 (X7)	Built-in System Interface	•	•	•	•
C5 (X7)	·	•	•	•	•
	Air Conditioning	•		•	
C5 (X7)	Electric Power Steering		•		•
C5 (X7)	Steering Wheel With Fixed Central Control	•	•	•	•
C5 (X7)	Engine Relay Unit	•	•	•	•
C5 (X7)	Trailer Relay Unit	•	•	•	•
C5 (X7)	Body Control Module	•	•	•	•
C5 (X7)	Driver Door Control Panel	•	•	•	•
C5 (X7)	Driver Seat Memorizing Unit	•	•	•	•
C5 (X7)	Seat Belt Reminder LED	•	•	•	•
C5 (X7)	Battery Change Status Unit	•	•	•	•
C5 (X7)	Hands-free Control Unit	•	•	•	•
C5 (X7)	Rain/Brightness Sensor	•	•	•	•
C5 (X7)	Parking Assistance Module	•	•	•	•
C5 (X7)	Suspension System Control	•	•	•	•
C5 (X7)	Active Damper Electronic Unit	•	•	•	•
L	l	ı			

C5 (X7)	High Frequency Receiver	•	•	•	•
C5 (X7)	Lane Departure Warning System	•	•	•	•
C5 (X7)	Display/Telematics	•	•	•	•
C5 (X7)	Service Module	•	•	•	•
C5 (X7)	Multifunction Display	•	•	•	•
C5 (X7)	Directional Headlamps	•	•	•	•
C5 (X7)	Deflation Detection	•	•	•	•
C5 (X7)	Additional Heating	•	•	•	•
C5 (X7)	Audio Amplifier	•	•	•	•
C5 (X7)	BASHE5	•	•	•	•
C5 (X7)	Windscreen Wiper	•	•	•	•
C5 (X7)	CD Player	•	•	•	•
C5 (X7)	Radio	•	•	•	•
C5 (X7)	Alarm	•	•	•	•
					_
C6 C6	Engine Control Moduel	•	•	•	•
C6	Auto Gearbox	•	•	•	_
	Anti-lock Brake System	•	•	•	•
C6	Electric Secondary Brake	•	•	•	•
C6	Airbag	•	•	•	•
C6	Control Panel	•	•	•	•
C6	Built-in System Interface (BSI)	•	•	•	•
C6	Engine Relay Unit	•	•	•	•
C6	Trailer Relay Unit	•	•	•	•
C6	Boot Relay Unit	•	•	•	•
C6	Suspension	•	•	•	•
C6	Air Conditioning	•	•	•	•
C6	Rear Air Conditioning Panel	•	•	•	•
C6	Parking Assistance Module	•	•	•	•
C6	Steering Wheel With Fixed Central Control	•	•	•	•
C6	Driver Door Control Panel	•	•	•	•
C6	Passenger Door Module	•	•	•	•
C6	Driver Seat Memorizing Unit	•	•	•	•
C6	Passenger Seat Memorisation Unit	•	•	•	•
C6	Left Seat Switch Panel	•	•	•	•
C6	Right Seat Switch Panel	•	•	•	•
C6	Rear Seat Memorising Unit	•	•	•	•
C6	Battery Change Status Unit	•	•	•	•
C6	Rain/Brightness Sensor	•	•	•	•
C6	Directional Headlamps	•	•	•	•
C6	Deflation Detection	•	•	•	•
C6	Additional Heating	•	•	•	•
C6	Hands-free Control Unit	•	•	•	•
C6	High Frequency Receiver	•	•	•	•
C6	High Head Vision	•	•	•	•
C6	Lane Departure Warning System	•	•	•	•
C6	Headlamp (Left)	•	•	•	•
C6	Headlamp (Right)	•	•	•	•
C6	Moving Panel Deflector	•	•	•	•
C6	Pedestrian Impact Detection	•	•	•	•
C6	Windscreen Wiper	•	•	•	•
C6	Boitier Telematique	•	•	•	•
C6	Multifunction Display	•	•	•	•
C6	CD Player	•	•	•	•
C6	Radio	•	•	•	•
C6	Alarm	•	•	•	•
C8	Engine Control Moduel	•	•	•	•
C8	Auto Gearbox	•	•	•	•
C8	Anti-lock Brake System	•	•	•	•
00	mict fook brake oyocoll	<u> </u>	<u> </u>		

C8	Airbag	•	•	•	•
C8	Control Panel	•	•	•	•
C8	Built-in System Interface (BSI)	•	•	•	•
C8	Air Conditioning	•	•	•	•
C8	Engine Relay Unit	•	•	•	•
C8	Trailer Relay Unit	•	•	•	•
C8	Diesel Additive Function	•	•	•	•
C8	Electric Power Steering	•	•	•	•
C8	Steering Wheel With Fixed Central Control	•	•	•	•
C8	Parking Assistance Module	•	•	•	•
C8	Driver Door Control Panel	•	•	•	•
C8	Passenger Door Module	•	•	•	•
C8	Sliding Side Door Module	•	•	•	•
C8	Driver Seat Memorizing Unit	•	•	•	•
C8	Hands-free Control Unit	•	•	•	•
C8	Additional Heating	•	•	•	•
C8	Rain/Brightness Sensor	•	•	•	•
C8	Multifunction Display	•	•	•	•
C8	Headlamp (Left)	•	•	•	•
C8	Headlamp (Right)	•	•	•	•
	Display/Telematics	•	_		_
C8		_	•	•	•
C8	Telematic Unit	•	•	•	•
C8	LEDs And Odometer	•	•	•	•
C8	Deflation Detection	•	•	•	•
C8	Front Sunsroof	•	•	•	•
C8	Middle Sunroof	•	•	•	•
C8	Rear Sunroof	•	•	•	•
C8	CD Player	•	•	•	•
C8	Radio	•	•	•	•
C8	Alarm	•	•	•	•
C-CROSSER	Engine Control Moduel	•	•	•	•
C-CROSSER	Auto Gearbox	•	•	•	•
C-CROSSER	Anti-lock Brake System	•	•	•	•
C-CROSSER	Electronic Stability Program	•	•	•	•
C-CROSSER	Airbag	•	•	•	•
C-CROSSER	Control Panel	•	•	•	•
C-CROSSER	Air Conditioning	•	•	•	•
C-CROSSER	Steering Wheel Angle Sensor	•	•	•	•
C-CROSSER	Parking Assistance Module	•	•	•	•
C-CROSSER	Driver Door Control Panel	•	•	•	•
C-CROSSER	Passenger Door Switch Panel	•	•	•	•
C-CROSSER	Rear Left Door Switch Panel	•	•	•	•
C-CROSSER	Rear Right Door Switch Panel	•	•	•	•
C-CROSSER	Rear Final Drive Piloted Clutch	•	•	•	•
C-CROSSER	Locking And Immobiliser Control Module	•	•	•	•
C-CROSSER	Headlamp Beam Corrector	•	•	•	•
C-CROSSER	Rain/Brightness Sensor	•	•	•	•
C-CROSSER	Hands-free Control Unit	•	•	•	•
C-CROSSER	Gear Lever (DCT)	•	•	•	•
C-CROSSER			ı -	l <sup>*</sup>	
I SHOUSEN		•	•	•	
C-CROSSER	Sunroof	•	•	•	•
C-CROSSER	Sunroof Navigation	•	•	•	•
C-CROSSER	Sunroof Navigation Radio	•	•	•	•
C-CROSSER C-ELYSEE	Sunroof Navigation Radio Engine Control Moduel	•	•	•	•
C-CROSSER C-ELYSEE C-ELYSEE	Sunroof Navigation Radio Engine Control Moduel Auto Gearbox	•	•	•	•
C-CROSSER C-ELYSEE C-ELYSEE C-ELYSEE	Sunroof Navigation Radio Engine Control Moduel Auto Gearbox Anti-lock Brake System	•	•	•	•
C-CROSSER C-ELYSEE C-ELYSEE C-ELYSEE C-ELYSEE	Sunroof Navigation Radio Engine Control Moduel Auto Gearbox Anti-lock Brake System SAC (SIEMENS)	•	• • • • • • • • • • • • • • • • • • •	•	•
C-CROSSER C-ELYSEE C-ELYSEE C-ELYSEE	Sunroof Navigation Radio Engine Control Moduel Auto Gearbox Anti-lock Brake System	•	•	•	•

a privapp (va (vi)		_	I =	_	_
	Anti-lock Brake System	•	•	•	•
	Airbag	•	•	•	•
C-ELYSEE (M3/M4)	Control Panel	•	•	•	•
C-ELYSEE (M3/M4)	Built-in System Interface (BSI)	•	•	•	•
C-ELYSEE (M3/M4)	Electric Power Steering	•	•	•	•
C-ELYSEE (M3/M4)	Steering Wheel With Fixed Central Control	•	•	•	•
C-ELYSEE (M3/M4)	Parking Assistance Module	•	•	•	•
C-ELYSEE (M3/M4)	Trailer Relay Unit	•	•	•	•
C-ELYSEE (M3/M4)	Multiplexed Addition Pump	•	•	•	•
C-ELYSEE (M3/M4)	Multifunction Display	•	•	•	•
C-ELYSEE (M3/M4)	Radio	•	•	•	•
, , ,	Siren	•	•	•	•
	Engine Control Moduel	•	•	•	•
	Auto Gearbox	•	•	•	•
C-QUATRE	Anti-lock Brake System	•	•	•	•
C-QUATRE	Airbag (AUTOLIV)	•	•	•	•
C-QUATRE	Control Panel	•	•	•	•
C-QUATRE	Built-in System Interface (BSI)	•	•	•	•
C-QUATRE	Air Conditioning	•	•	•	•
C-QUATRE	Engine Relay Unit	•	•	•	•
C-QUATRE	Electric Power Steering	•	•	•	•
C-QUATRE	Steering Wheel With Fixed Central Control	•	•	•	•
C-QUATRE	Parking Assistance Module	•	•	•	•
C-QUATRE	Rain/Brightness Sensor	•	•	•	•
C-QUATRE	Hands-free Control Unit	•	•	•	•
	Multifunction Display	•	•	•	•
·	MDP CONDUCT	•	•	•	•
C-QUATRE	MDP PASSAG	•	•	•	•
				_	_
C-QUATRE	Telematic RT3	•	•	•	•
C-QUATRE	CD Player	•	•	•	•
	Radio	•	•	•	•
C-TRIOMPHE	Engine Control Moduel	•	•	•	•
C-TRIOMPHE	Auto Gearbox	•	•	•	•
C-TRIOMPHE	Anti-lock Brake System	•	•	•	•
C-TRIOMPHE	Airbag	•	•	•	•
C-TRIOMPHE	Built-in System Interface	•	•	•	•
C-TRIOMPHE	Air Conditioning	•	•	•	•
C-TRIOMPHE	Engine Relay Unit	•	•	•	•
C-TRIOMPHE	Engine Service Box	•	•	•	•
	Tachometer Control Box	•	•	•	•
	Electric Power Steering	•	•	•	•
	Steering Wheel With Fixed Central Control	•	•	•	•
	Passenger Door Module	•	•	•	•
	Adjustable Headlight	•	•	•	•
	Parking Assistance Module	•	•	•	•
C-TRIOMPHE	Hands-free Control Unit	•	•	•	•
C-TRIOMPHE	Rain/Brightness Sensor	•	•	•	•
C-TRIOMPHE	Multifunction Display C	•	•	•	•
C-TRIOMPHE	MDP CONDUCT	•	•	•	•
C-TRIOMPHE	Telematic RT3	•	•	•	•
C-TRIOMPHE	CD Player	•	•	•	•
C-TRIOMPHE	Radio	•	•	•	•
			•	•	•
DS3	Engine Control Moduel	•	•	•	•
		•		•	•
	Auto Gearbox		•		
	Anti-lock Brake System	•	•	•	•
	Airbag	•	•	•	•
DS3	Control Panel	•	•	•	•

DG0	D 11	_	_	_	1
DS3	Built-in System Interface	•	•	•	•
DS3	Air Conditioning	•	•	•	•
DS3	Engine Relay Unit	•	•	•	•
DS3	Trailer Relay Unit	•	•	•	•
DS3	Electric Power Steering	•	•	•	•
DS3	Steering Wheel With Fixed Central Control	•	•	•	•
DS3	Multiplexed Diesel Additive Pump	•	•	•	•
DS3	Parking Assistance Module	•	•	•	•
DS3	Battery Change Status Unit	•	•	•	•
DS3	Hands-free Control Unit	•	•	•	•
DS3	High Frequency Receiver	•	•	•	•
DS3	Rain/Brightness Sensor	•	•	•	•
DS3	Seat Belt Reminder LED	•	•	•	•
DS3	Service Module	•	•	•	•
DS3	Multifunction Display	•	•	•	•
DS3	Display/Telematics	•	•	•	•
DS3	Radio	•	•	•	•
DS3	Alarm	•	•	•	•
DS4	Engine Control Moduel	•	•	•	•
DS4	Auto Gearbox	•	•	•	•
DS4	Anti-lock Brake System	•	•	•	•
DS4	Electric Secondary Brake	•	•	•	•
DS4	Airbag	•	•	•	•
DS4	Control Panel	•	•	•	•
		•	•	•	•
DS4	Built-in System Interface (BSI)				_
DS4	Air Conditioning	•	•	•	•
DS4	Trailer Relay Unit	•	•	•	•
DS4	Engine Relay Unit	•	•	•	•
DS4	Electric Power Steering	•	•	•	•
DS4	Steering Wheel With Fixed Central Control	•	•	•	•
DS4	Battery Charge Status Unit	•	•	•	•
DS4	Matrix Screen Integral To The Instrument Panel	•	•	•	•
DS4	Multiplexed Additive Adding Pump	•	•	•	•
DS4	Lane Departure Warning System	•	•	•	•
DS4	Parking Assistance Module	•	•	•	•
DS4	Driver Door Control Panel	•	•	•	•
DS4	Driver Seat Memorizing Unit	•	•	•	•
DS4	Seat Belts Not Fastened LED Unit	•	•	•	•
DS4	Rain/Brightness Sensor	•	•	•	•
DS4	Driver School Module	•	•	•	•
DS4	Monitoring Of The Blind Spot	•	•	•	•
DS4	Supply Protection And Management Unit	•	•	•	•
DS4	Directional Headlamps	•	•	•	•
DS4	Multifunction Display	•	•	•	•
DS4	Display/Telematics	•	•	•	•
DS4	Multiplexed Control Panel	•	•	•	•
DS4	Deflation Detection	•	•	•	•
DS4	Audio Amplifier	•	•	•	•
DS4	Service Module	•	•	•	•
DS4	Alarm	•	•	•	•
DS4	Radio	•	•	•	•
DS5	Engine Control Moduel	•	•	•	•
DS5	Auto Gearbox	•	•	•	•
DS5	Anti-lock Brake System	•	•	•	•
DS5	Airbag	•	•	•	•
DS5	Control Panel	•	•	•	•
DS5		•	•	•	•
	Air Conditioning				_
DS5	Engine Relay Unit	•	•	•	•

nce	Trailar Palay Unit				
DS5	Trailer Relay Unit	•	•	•	•
DS5	Electric Steering Lock Electric Power Steering	_	•	_	_
	v v	•	•	•	•
DS5	Steering Wheel With Fixed Central Control	•	•	•	•
DS5	Parking Assistance Module	•	•	•	•
DS5	Hands-free Control Unit	•	•	•	•
DS5	Electric Key Reader	•	•	•	•
DS5	Rain/Brightness Sensor	•	•	•	•
DS5	Driver Seat Memorizing Unit	•	•	•	•
DS5	Seat Belts Not Fastened LED Unit	•	•	•	•
DS5	Battery Charge Status Unit	•	•	•	•
DS5	Directional Headlamps	•	•	•	•
DS5	Traction Battery	•	•	•	•
DS5	Matrix Screen Integral To The Instrument Panel	•	•	•	•
DS5	Multiplexed Additive Adding Pump	•	•	•	•
DS5	Supply Protection And Management Unit	•	•	•	•
DS5	Service Module	•	•	•	•
DS5	Multifunction Display	•	•	•	•
DS5	Display/Telematics	•	•	•	•
DS5	Windscreen Wiper	•	•	•	•
DS5	Telematic Navigator	•	•	•	•
DS5	Vibrators Control	•	•	•	•
DS5	Multifunction Camera	•	•	•	•
DS5	Deflation Detection	•	•	•	•
DS5	High Head Vision	•	•	•	•
DS5	Audio Amplifier	•	•	•	•
DS5	Multiplexed Control Panel	•	•	•	•
DS5	Hybrid Mode Selector	•	•	•	•
DS5	Hybrid Control 1	•	•	•	•
DS5	Clock	•	•	•	•
DS5	Radio	•	•	•	•
DS5	Alarm	•	•	•	•
DS5 (Hybird 4)	Engine Control Moduel	•	•	•	•
DS5 (Hybird 4)	Auto Gearbox	•	•	•	•
DS5 (Hybird 4)	Anti-lock Brake System	•	•	•	•
DS5 (Hybird 4)	Airbag	•	•	•	•
DS5 (Hybird 4)	Control Panel	•	•	•	•
DS5 (Hybird 4)	Air Conditioning	•	•	•	•
DS5 (Hybird 4)	Engine Relay Unit	•	•	•	•
DS5 (Hybird 4)	Trailer Relay Unit	•	•	•	•
DS5 (Hybird 4)	Electric Steering Lock	•	•	•	•
DS5 (Hybird 4)	Electric Power Steering	•	•	•	•
DS5 (Hybird 4)	Steering Wheel With Fixed Central Control	•	•	•	•
DS5 (Hybird 4)	Parking Assistance Module	•	•	•	•
DS5 (Hybird 4)	Hands-free Control Unit	•	•	•	•
DS5 (Hybird 4)	Electric Key Reader	•	•	•	•
DS5 (Hybird 4)	Driver Seat Memorizing Unit	•	•	•	•
				_	
DS5 (Hybird 4)	Seat Belts Not Fastened LED Unit	•	•	•	•
DS5 (Hybird 4)	Directional Headlamps	•	•	•	•
DS5 (Hybird 4)	Matrix Screen Integral To The Instrument Panel	•	•	•	•
DS5 (Hybird 4)	Battery Charge Status Unit	•	•	•	•
DS5 (Hybird 4)	Multiplexed Additive Adding Pump	•	•	•	•
DS5 (Hybird 4)	Supply Protection And Management Unit	•	•	•	•
DS5 (Hybird 4)	Rain/Brightness Sensor	•	•	•	•
DS5 (Hybird 4)	Service Module	•	•	•	•
DS5 (Hybird 4)	Multifunction Display	•	•	•	•
DS5 (Hybird 4)	Display/Telematics	•	•	•	•
DS5 (Hybird 4)	Windscreen Wiper	•	•	•	•

ng= (** · · · · ·	W. 1. W. 1. G. 1.	1_	I =	_	_
	Hybrid Mode Selector	•	•	•	•
	Traction Battery	•	•	•	•
	Hybrid Control 1	•	•	•	•
	Hybrid Control 2	•	•	•	•
	Telematic Navigator	•	•	•	•
DS5 (Hybird 4)	Vibrators Control	•	•	•	•
	Multifunction Camera	•	•	•	•
DS5 (Hybird 4)	Multiplexed Control Panel	•	•	•	•
DS5 (Hybird 4)	Deflation Detection	•	•	•	•
DS5 (Hybird 4)	High Head Vision	•	•	•	•
DS5 (Hybird 4)	Audio Amplifier	•	•	•	•
DS5 (Hybird 4)	Clock	•	•	•	•
DS5 (Hybird 4)	Radio	•	•	•	•
DS5 (Hybird 4)	Alarm	•	•	•	•
DS 5LS	Engine Control Moduel	•	•	•	•
DS 5LS	Auto Gearbox	•	•	•	•
DS 5LS	Anti-lock Brake System	•	•	•	•
DS 5LS	Electric Secondary Brake	•	•	•	•
	· · · · · · · · · · · · · · · · · · ·		•	•	•
	-		•	•	•
	Air Conditioning	•	•	•	•
			•	•	•
		•	_	_	_
	Electric Power Steering	•	•	•	•
	Electric Steering Lock	•	•	•	•
	Steering Wheel With Fixed Central Control	•	•	•	•
	Parking Assistance Module	•	•	•	•
	Battery Charge Status Unit	•	•	•	•
	Rain/Brightness Sensor	•	•	•	•
	Matrix Screen Integral To The Instrument Panel	•	•	•	•
	Supply Protection And Management Unit	•	•	•	•
	Hands-free Control Unit	•	•	•	•
	Electric Key Reader	•	•	•	•
DS 5LS	Audio Amplifier	•	•	•	•
DS 5LS	Directional Headlamps	•	•	•	•
	Services Module	•	•	•	•
DS 5LS	Under Inflation Detection	•	•	•	•
DS 5LS	Multifunction Display	•	•	•	•
DS 5LS	Audio/Navigation/Air Conditioning	•	•	•	•
DS 5LS	Telematic Unit	•	•	•	•
DS 5LS	Radio	•	•	•	•
DS 5LS	Alarm	•	•	•	•
DS6	Engine Control Moduel	•	•	•	•
DS6	Auto Gearbox	•	•	•	•
DS6	Anti-lock Brake System	•	•	•	•
	Electric Secondary Brake	•	•	•	•
	Airbag	•	•	•	•
	Control Panel	•	•	•	•
	Air Conditioning	•	•	•	•
	Engine Relay Unit	•	•	•	•
	Electric Steering Lock	•	•	•	•
	Electric Steering Lock Electric Power Steering	•	•	•	•
	Steering Wheel With Fixed Central Control	•	•	•	•
	Parking Assistance Module	•	•	•	•
	Body Control Module	•	•	•	•
	Rain/Brightness Sensor	•	•	•	•
	Directional Headlamps	•	•	•	•
	Hands-free Control Unit	•	•	•	•
DS6	Electric Key Reader	•	•	•	•

		•			
DS6	Under Inflation Detection	•	•	•	•
DS6	Voltage Retaining Device	•	•	•	•
DS6	Matrix Screen Integral To The Instrument Panel	•	•	•	•
DS6	Supply Protection And Management Unit	•	•	•	•
DS6	Battery Charge Status Unit	•	•	•	•
DS6	Signalling Fuse Box	•	•	•	•
DS6	Anti-slip Mode Selector	•	•	•	•
DS6	Audio Amplifier	•	•	•	•
DS6	Services Module	•	•	•	•
DS6	Multifunction Display	•	•	•	•
DS6		_	_	_	•
	Audio/Navigation/Air Conditioning	•	•	•	_
DS6	Telematic Unit	•	•	•	•
DS6	Alarm	•	•	•	•
ELYSEE	Engine Control Moduel	•	•	•	•
ELYSEE	Auto Gearbox	•	•	•	•
ELYSEE	Anti-lock Brake System	•	•	•	•
ELYSEE	Airbag (SIEMENS)	•	•	•	•
ELYSEE	Airbag (AUTOLIV)	•	•	•	•
ELYSEE	Electric Key Reader	•	•	•	•
EVASION (SYNERGIE)	Engine Control Moduel	•	•	•	•
EVASION (SYNERGIE)	Auto Gearbox	•	•	•	•
EVASION (SYNERGIE)	ABS (5.3)	•	•	•	•
EVASION (SYNERGIE)	Airbag (AUTOLIV)	•	•	•	•
FUKANG	•	_	_	_	_
	Engine Control Moduel	•	•	•	•
FUKANG	Auto Gearbox	•	•	•	•
FUKANG	Anti-lock Brake System	•	•	•	•
JUMPY (DISPATCH)	Engine Control Moduel	•	•	•	•
JUMPY (DISPATCH)	Auto Gearbox	•	•	•	•
JUMPY (DISPATCH)	Anti-lock Brake System	•	•	•	•
JUMPY (DISPATCH)	Airbag	•	•	•	•
JUMPY (DISPATCH)	Control Panel	•	•	•	•
JUMPY (DISPATCH)	Built-in System Interface	•	•	•	•
JUMPY (DISPATCH)	Air Conditioning	•	•	•	•
JUMPY (DISPATCH)	Rear Air Conditioning Panel	•	•	•	•
JUMPY (DISPATCH)	Engine Relay Unit	•	•	•	•
JUMPY (DISPATCH)	Trailer Relay Unit	•	•	•	•
	Electric Power Steering	•	•	•	•
JUMPY (DISPATCH)	Ů		_	_	_
JUMPY (DISPATCH)	Steering Wheel With Fixed Central Control	•	•	•	•
JUMPY (DISPATCH)	Parking Assistance Module	•	•	•	•
JUMPY (DISPATCH)	Hands-free Control Unit	•	•	•	•
JUMPY (DISPATCH)	Additional Heating	•	•	•	•
JUMPY (DISPATCH)	Multifunction Display	•	•	•	•
JUMPY (DISPATCH)	Rain/Brightness Sensor	•	•	•	•
JUMPY (DISPATCH)	Bodywork Conversion Unit	•	•	•	•
JUMPY (DISPATCH)	Pneumatic Suspension	•	•	•	•
JUMPY (DISPATCH)	Anti-slip Mode Selector	•	•	•	•
JUMPY (DISPATCH)	Battery Change Status Unit	•	•	•	•
JUMPY (DISPATCH)	High Frequency Receiver	•	•	•	•
JUMPY (DISPATCH)	Deflation Detection	•	•	•	•
JUMPY (DISPATCH)	Display/Telematics	•	•	•	•
		•		_	_
JUMPY (DISPATCH)	·		•	•	•
JUMPY (DISPATCH)	Radio	•	•	•	•
JUMPY (DISPATCH)	DISPATCH) Alarm		•	•	•
JUMPER (RELAY)			•	•	•
JUMPER (RELAY)	Anti-lock Brake System	•	•	•	•
JUMPER (RELAY)	Control Panel	•	•	•	•
JUMPER (RELAY)	Air Conditioning	•	•	•	•
	•				
JUMPER (RELAY)	Electric Power Steering	•	•	•	•

()	T	1_	T_	1_	T-
JUMPER (RELAY)	Parking Assistance Module	•	•	•	•
JUMPER (RELAY)	Additional Heating	•	•	•	•
NEMO	Auto Gearbox	•	•	•	•
NEMO	Anti-lock Brake System	•	•	•	•
NEMO	Airbag	•	•	•	•
NEMO	Control Panel	•	•	•	•
NEMO	Parking Assistance Module	•	•	•	•
SAXO	Engine Control Moduel	•	•	•	•
SAXO	Auto Gearbox	•	•	•	•
SAXO	Anti-lock Brake System	•	•	•	•
SAXO	Airbag	•	•	•	•
SAXO	Electric Key Reader	•	•	•	•
	· ·				
XSARA	Engine Control Moduel	•	•	•	•
XSARA	Auto Gearbox	•	•	•	•
XSARA	Anti-lock Brake System	•	•	•	•
XSARA	Airbag	•	•	•	•
XSARA	Control Panel	•	•	•	•
XSARA	Built-in System Interface	•	•	•	•
XSARA	Air Conditioning	•	•	•	•
XSARA	Parking Assistance Module	•	•	•	•
XSARA	Steering Wheel With Fixed Central Control	•	•	•	•
XSARA	Rain/Brightness Sensor	•	•	•	•
XSARA	Multifunction Display B	•	•	•	•
XSARA	Radio	•	•	•	•
					_
XSARA	CD Player	•	•	•	•
XSARA	Alarm	•	•	•	•
XSARA (PICASSO)	Engine Control Moduel	•	•	•	•
XSARA (PICASSO)	Auto Gearbox	•	•	•	•
XSARA (PICASSO)	Anti-lock Brake System	•	•	•	•
XSARA (PICASSO)	Airbag	•	•	•	•
XSARA (PICASSO)	Instrument Cluster	•	•	•	•
XSARA (PICASSO)	Built-in System Interface	•	•	•	•
XSARA (PICASSO)	Air Conditioning	•	•	•	•
XSARA (PICASSO)	Parking Assistance Module	•	•	•	•
XSARA (PICASSO)	Steering Wheel With Fixed Central Control	•	•	•	•
XSARA (PICASSO)	Rain/Brightness Sensor	-	•	•	•
		<del> </del>	•		1
XSARA (PICASSO)	Multifunction Display B	•	•	•	•
XSARA (PICASSO)	ADDGO 2	•	•	•	•
XSARA (PICASSO)	CD Player	•	•	•	•
XSARA (PICASSO)	Radio	•	•	•	•
XSARA (PICASSO)	Alarm	•	•	•	•
XSARA (PICASSO)	Engine Control Moduel	•	•	•	•
(CHINA) XSARA (PICASSO)	Auto Gearbox	•	•	•	•
(CHINA)	nuto dearbox				
XSARA (PICASSO)	Anti-lock Brake System	•	•	•	•
(CHINA) XSARA (PICASSO)	Airbag (AUTOLIV)	•	•	•	•
(CHINA)	hiibag (holoLiv)				
XSARA (PICASSO)	Control Panel	•	•	•	•
(CHINA) XSARA (PICASSO)	Air Conditioning	•	•	•	•
(CHINA)	ATT CONGITTONING				
XSARA (PICASSO)	Parking Assistance Module	•	•	•	•
(CHINA) XSARA (PICASSO)	Steering Wheel With Fixed Central Control	•	•	•	•
(CHINA)	eccelling anger aren tiven central confitor				
XSARA (PICASSO)	Rain/Brightness Sensor	•	•	•	•
(CHINA) XSARA (PICASSO)	Multifunction Display B	•	•	•	•
(CHINA)	materiunceron propray D				
XSARA (PICASSO)	ADDGO 2	•	•	•	•
				•	•
(CHINA) XSARA (PICASSO)	CD Player	•	•	•	•

XSARA (PICASSO) (CHINA)	Radio	•	•	•	•
XANTIA	Engine Control Moduel	•	•	•	•
XANTIA	Airbag	•	•	•	•
XANTIA	Airbag (Left)	•	•	•	•
XANTIA	CPH_TEXTON	•	•	•	•
XANTIA	TEVES_MK20E	•	•	•	•
XM	Engine Control Moduel	•	•	•	•
XM	Anti-lock Brake System	•	•	•	•
ZX	Engine Control Moduel	•	•	•	•
ZX	Auto Gearbox	•	•	•	•

CITROEN_VO1.25 EPB Function List (Note:For reference only)					
NOTES:					
• This function is supported.					
※ This function may be supported	, which depends on the actual condition of the vehicle.				
O This function is not supported					
▲ This function is the new featu	re in this version.				
Vehicle	EPB				
C4	•				
C4 (PICASSO)	•				
C4 (SEDAN)	•				
C4L	•				
C5 (X7)	C5 (X7)				
C6	•				
DS4	•				
DS 5LS	•				

•

DS6

# CITROEN\_VO1.25 ETC Function List (Note:For reference only)

#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

O THIS TUNCTION IS NOT Supported	
▲ This function is the new feat	ure in this version.
Vehicle	ETC
BERLINGO	•
C1	•
C2	•
C3	•
C4	•
C5	•
C6	•
C8	•
C-ELYSEE	•
C-QUATRE	•
C-TRIOMPHE	•
DS3	•
DS4	•
DS5	•
DS 5LS	•
DS6	•
ELYSEE	•
EVASION (SYNERGIE)	•
FUKANG	•
JUMPY (DISPATCH)	•
JUMPER (RELAY)	•
SAXO	•
XSARA	•
ZX	•
	•

# CITROEN\_VO1.25 DPF Function List (Note:For reference only)

#### NOTES.

C5 (X7)

HDI\_SID807

This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

X This function may	be supported, which deper	nds on the actual condition of the vehicle.
O This function is n	not supported.	
▲ This function is t	the new feature in this v	
Vehicle	Chassis	DPF
BERLINGO B9	HDI_SID807	•
BERLINGO B9	HDI_SID807_BR2	•
C3 A51	EDC17C10	•
C3 A51	EDC17C10_BR2	•
C3 A51	HDI_SID807	•
C3 A51	HDI_SID807_BR2	•
C3	EDC16C34_DV6	•
C3 R	EDC16C34_DV6	•
C3 PICASSO (A58)	EDC17C10	•
C3 PICASSO (A58)	HDI_SID807	•
C3 PICASSO (A58)	HDI_SID807_BR2	•
C4	HDI_SID803	•
C4	EDC16C3	•
C4	HDI_SID803A	•
C4	DCM34	•
C4	DCM35	•
C4	HDI_SID807_BR2	•
C4 (B7)	DCM35_BR2	•
C4 (B7)	HDI_SID807_BR2	•
C4 (B7)	EDC17C10_BR2	•
C4 SEDAN	HDI_SID803	•
C4 SEDAN	EDC16C3	•
C4 SEDAN	HDI_SID803A	•
C4 SEDAN	DCM34	•
C4 SEDAN	DCM35	•
C4 SEDAN	HDI_SID807_BR2	•
C4 PICASSO	EDC16C3	•
C4 PICASSO	HDI_SID803A	•
C4 PICASSO	DCM34	•
C4 PICASSO	DCM35	•
C4 PICASSO	DCM35_BR2	•
C4 PICASSO	HDI_SID807	•
C4 PICASSO	HDI_SID807_BR2	•
C4 PICASSO (B78)	DCM62	•
C4 PICASSO (B78)	HDI_SID807_BR2	•
C4 AIRCROSS	HDI_SID807_J3J4	•
C5 (X7)	HDI_SID201	•
C5 (X7)	EDC16CP39	•
C5 (X7)	DCM34	•
C5 (X7)	DCM34_P	•
C5 (X7)	DCM35	•
C5 (X7)	DCM35_BR2	•
C5 (X7)	EDC16C3	•
C5 (X7)	EDC17CP11	•
C5 (X7)	EDC17CP42	•
\/		

C5 (X7)	HDI_SID807_BR2	•
	EDC15C2	•
C5 R	EDC16CP39	•
C5 R	HDI_SID803A	•
	HDI_SID803	•
C6	EDC16CP39	•
C6	EDC17CP11	•
C6	HDI_SID201	•
C8 CAN	EDC15C2	•
C8 CAN	HDI_SID803A	•
C8 CAN	EDC16CP39	•
	DCM35	•
C8 CAN	DCM35_BR2	•
C8	EDC15C2	•
	EDC16CP39	•
C-CROSSER	EDC16CP39_E5	•
DS3	EDC17C10	•
DS3	EDC17C10_BR2	•
DS3	HDI_SID807	•
DS3	HDI_SID807_BR2	•
DS4	DCM35_BR2	•
DS4	EDC17C10_BR2	•
DS4	HDI_SID807_BR2	•
DS5	DCM35_BR2	•
DS5	HDI_SID807_BR2	•
DS5 Hybird 4	DCM35_HY	•
JUMPY 3	HDI_SID803A	•
JUMPY 3	DCM35	•
JUMPY 3	DCM35_BR2	•
JUMPER 3	EDC17CP52	•
JUMPER 3 MINIBUS	EDC17CP52	•
NEMO	HDI_8DF2	•

### CITROEN\_VO1.25 INJ Function List (Note:For reference only)

#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.				
▲ This function is the new feature in this version.				
Vehicle	Chassis	INJ		
BERLINGO	EDC16C3	•		
BERLINGO (B9)	EDC16C3	•		
BERLINGO (B9)	EDC17C10_BR2	•		
BERLINGO (B9)	HDI_SID807	•		
C2	EDC16C3	•		
C2 (CHINA)	EDC16C3	•		
C3	EDC16C3	•		
C3 (A51)	EDC17C10	•		
C3 (A51)	EDC17C10_BR2	•		
C3 (A51)	EDC16C3_DV4	•		
C3 (A51)	HDI_SID807	•		
C3 (A51)	HDI_SID807_BR2	•		
C3 (NEW LOOK)	EDC16C3	•		
C3 (PICASSO) (A58)	EDC17C10	•		
C3 (PICASSO) (A58)	EDC17C10_BR2	•		
C3 (PICASSO) (A58)	EDC16C3	•		
C3 (PICASSO) (A58)	HDI_SID807	•		
C3 (PICASSO) (A58)	HDI_SID807_BR2	•		
C3 (PLURIEL)	EDC16C3	•		
C4	DCM35	•		
C4	DCM34	•		
C4	EDC16C3	•		
C4	HDI_SID807_BR2	•		
C4 (B7)	DCM35_BR2	•		
C4 (B7)	HDI_SID807_BR2	•		
C4 (B7)	EDC17C10_BR2	•		
C4 (PICASSO)	DCM35	•		
C4 (PICASSO)	DCM35_BR2	•		
C4 (PICASSO)	EDC16C3	•		
C4 (PICASSO)	HDI_SID807	•		
C4 (PICASSO)	DCM34	•		
C4 (PICASSO)	HDI_SID807_BR2	•		
C4 (PICASSO) (B78)	EDC17C10_BR2	•		
C4 (SEDAN)	DCM35	•		
C4 (SEDAN)	EDC16C3	•		
C4 (SEDAN)	HDI_SID807_BR2	•		
C4 (SEDAN)	DCM34	•		
C5	EDC16C3	•		
C5 (X7)	DCM34_P	•		
C5 (X7)	DCM35_1	•		
C5 (X7)	EDC16CP39	•		
C5 (X7)	DCM34	•		
C5 (X7)	DCM35_BR2	•		
C5 (X7)	EDC16C3	•		
		•		
C5 (X7)	EDC17CP11	•		
C5 (X7)	HDI_SID807			

C6		I	
BELTICUTS   BELTICUTS	C5 (X7)	HDI_SID807_BR2	•
BELTICE   BELT	C6	EDC16CP39	•
CS   EDC16C3	C6	EDC17CP11	
CS (CAN)   EDCI6C739	C6	EDC16C3	•
S (CAN) DCM35	C8	EDC16C3	•
C ELYSEE	C8 (CAN)	EDC16CP39	•
C ELYSEE	C8 (CAN)	DCM35	•
EDC17C10 BR2	C_ELYSEE	EDC16C3	•
DS3	C_ELYSEE	EDC17C10_BR2	•
DS3	DS3	EDC16C3	•
DS3   IDI SID807	DS3	EDC17C10	•
DS3	DS3	EDC17C10_BR2	•
DS3 HD1 \$10807 BR2  DS4 DCM35_BR2  DS4 EDC17C10 BR2  DS5 DCM35_BR2  DS5 DCM35_BR2  DS5 HD1 \$10807 BR2  ELYSEE EDC16C3  EVASION (SYNERGIE) EDC16C3  EVASION (SYNERGIE) EDC16C3  JUMPER (RELAY) EDC16C3  JUMPY 3 DCM35_BR2  JUMPY 3 DCM35_BR2  JUMPY 3 DCM35_BR2  JUMPY 3 EDC16C3  SAXO EDC16C3  SAXO EDC16C3  SAXO EDC16C3  XSARA (PICASSO) EDC16C3  EXSARA (PICASSO) EDC16C3  EXSARA (PICASSO) EDC16C3  EXSARA (PICASSO) (CHINA) EDC16C3	DS3	HDI_SID807	•
DS4	DS3	HDI_SID807_BR2	•
DS4	DS4	DCM35_BR2	•
DS5 DCM35_BR2	DS4	EDC17C10_BR2	•
DSS   HDI_SID807_BR2   ELYSEE   EDC16C3   EVASION (SYNERGIE)   EVASI	DS4	HDI_SID807_BR2	•
ELYSEE	DS5	DCM35_BR2	•
ELYSEE         EDC16C3         •           FUKANG         EDC16C3         •           EVASION (SYNERGIE)         EDC16C3         •           JUMPER (RELAY)         EDC16C3         •           JUMPY 3         DCM35         •           JUMPY 3         DCM35_BR2         •           JUMPY 3         EDC16C3         •           JUMPY 3         EDC16C3         •           JUMPY (DISPATCH)         EDC16C3         •           SAXO         EDC16C3         •           XANTIA         EDC16C3         •           XSARA         EDC16C3         •           XSARA (PICASSO)         EDC16C3         •           XSARA (PICASSO)         EDC16C3         •           XSARA (PICASSO)         EDC16C3         •	DS5	HDI_SID807_BR2	•
EVASION (SYNERGIE)         EDC16C3         •           JUMPER (RELAY)         EDC16C3         •           JUMPY 3         DCM35         •           JUMPY 3         DCM35_BR2         •           JUMPY 3         EDC16C3         •           JUMPY 3         EDC17C10_BR2         •           JUMPY (DISPATCH)         EDC16C3         •           SAXO         EDC16C3         •           XANTIA         EDC16C3         •           XSARA         EDC16C3         •           XSARA (PICASSO)         EDC16C3         •           XSARA (PICASSO) (CHINA)         EDC16C3         •	ELYSEE	EDC16C3	•
JUMPY 3   DCM35   DC	FUKANG	EDC16C3	•
JUMPY 3         DCM35	EVASION (SYNERGIE)	EDC16C3	•
JUMPY 3         DCM35_BR2           JUMPY 3         EDC16C3           JUMPY 3         EDC17C10_BR2           JUMPY (DISPATCH)         EDC16C3           SAXO         EDC16C3           XANTIA         EDC16C3           XSARA         EDC16C3           XSARA (PICASSO)         EDC16C3           XSARA (PICASSO) (CHINA)         EDC16C3	JUMPER (RELAY)	EDC16C3	•
JUMPY 3         EDC16C3           JUMPY 3         EDC17C10_BR2           JUMPY (DISPATCH)         EDC16C3           SAXO         EDC16C3           XANTIA         EDC16C3           XSARA         EDC16C3           XSARA (PICASSO)         EDC16C3           XSARA (PICASSO) (CHINA)         EDC16C3	JUMPY 3	DCM35	•
JUMPY 3         EDC17C10_BR2           JUMPY (DISPATCH)         EDC16C3           SAXO         EDC16C3           XANTIA         EDC16C3           XSARA         EDC16C3           XSARA (PICASSO)         EDC16C3           XSARA (PICASSO) (CHINA)         EDC16C3	JUMPY 3	DCM35_BR2	•
JUMPY (DISPATCH)         EDC16C3         •           SAXO         EDC16C3         •           XANTIA         EDC16C3         •           XSARA         EDC16C3         •           XSARA (PICASSO)         EDC16C3         •           XSARA (PICASSO) (CHINA)         EDC16C3         •	JUMPY 3	EDC16C3	•
JUMPY (DISPATCH)         EDC16C3           SAXO         EDC16C3           XANTIA         EDC16C3           XSARA         EDC16C3           XSARA (PICASSO)         EDC16C3           XSARA (PICASSO) (CHINA)         EDC16C3	JUMPY 3		•
SAXO         EDC16C3         •           XANTIA         EDC16C3         •           XSARA         EDC16C3         •           XSARA (PICASSO)         EDC16C3         •           XSARA (PICASSO) (CHINA)         EDC16C3         •			•
XANTIA         EDC16C3           XSARA         EDC16C3           XSARA (PICASSO)         EDC16C3           XSARA (PICASSO) (CHINA)         EDC16C3	SAX0	EDC16C3	•
XSARA EDC16C3  XSARA (PICASSO) EDC16C3  XSARA (PICASSO) (CHINA) EDC16C3  EDC16C3	XANTIA		•
XSARA (PICASSO) EDC16C3  XSARA (PICASSO) (CHINA) EDC16C3	XSARA		•
XSARA (PICASSO) (CHINA) EDC16C3			•
	XSARA (PICASSO) (CHINA)		•
	ZX		•

## CITROEN\_VO1.25 OIL Function List (Note:For reference only)

#### NOTES:

• This function is supported.

lpha This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

▲ This function is the new	
Vehicle	0IL
BERLINGO	•
C2	•
C3	•
C4	•
C5	•
C6	•
C8	•
C-CROSSER	•
C-ELYSEE	•
C-QUATRE	•
C-TRIOMPHE	•
DS3	•
DS4	•
DS5	•
DS 5LS	•
DS6	•
EVASION (SYNERGIE)	•
JUMPY (DISPATCH)	•
JUMPER (RELAY)	•
NEMO	•
SAXO	•
XSARA	•
XANTIA	•

# CITROEN\_VO1.25 SAS Function List (Note:For reference only)

#### NOTES:

• This function is supported.

\* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

O This function is not supported.	_
lacktriangle This function is the new feature in t	
Vehicle	SAS
BERLINGO	•
C-ZERO	•
C1	•
C2	•
C3	•
C4	•
C5	•
C6	•
C8	•
C-CROSSER	•
C-ELYSEE	•
C-QUATRE	•
C-TRIOMPHE	•
DS3	•
DS4	•
DS5	•
DS 5LS	•
DS6	•
ELYSEE	•
FUKANG	•
JUMPY (DISPATCH)	•
JUMPER (RELAY)	•
NEMO	•
SAXO	•
XSARA	•
ASAKA	