CR MAX

INFINITI

INFINITI_V01.15 BMS Function List (Note:For reference only)

NOTES:

• This function is supported.

* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

A This function is the new feature in this

| ▲ This function is the new fe | ature in this version. |
|-------------------------------|------------------------|
| Vehicle | BMS |
| ESQ | • |
| EX25/EX35 | • |
| EX25/EX37 | • |
| EX35 | • |
| EX37 | • |
| FX35/FX45 | • |
| FX35/FX50 | • |
| FX35/FX50/FX30d | • |
| FX37 | • |
| FX37/FX50 | • |
| FX37/FX50/FX30d | • |
| G20 | • |
| G25/G37 Sedan | • |
| G35 | • |
| G37 | • |
| 130 | • |
| 135 | • |
| InfinitiM35/M45 | • |
| InfinitiQ70L | • |
| JX35 | • |
| M25/M37 | • |
| M25/M37/M56 | • |
| M35h | • |
| M37 | • |
| M37/M30d | • |
| M37/M56 | • |
| M37/M56/M30d | • |
| M45 | • |
| Q40 Sedan | • |
| Q45 | • |
| Q50 | • |
| Q60 | • |
| Q70 | • |
| QX4 | • |
| QX50 | • |
| QX56 | • |
| QX60 | • |
| QX70 | • |
| QX80 | |

INFINITI_V01.10 Daig Function List (Note:For reference only)

NOTES:

• This function is supported.

* This function may be supported, which depends on the actual condition of the vehicle.

O This function is not supported.

| m1 · | | | . 1 | | | | . 1 . | • |
|--------|----------|-----|-----|-----|---------|-----|-------|----------|
| L lhis | function | 1.8 | the | new | teature | 1 n | this: | version. |

| ▲ This function is the new feature in this version. | | _ | | | |
|---|------------|-----------|------------|----------|--|
| Vehicle | Model Year | | | | |
| EX25 | ALL | | | | |
| EX35 | ALL | | | | |
| EX37 | ALL | | | | |
| FX30d | ALL | | | | |
| FX45 | ALL | | | | |
| FX50 | ALL | | | | |
| G20 | ALL | | | | |
| G35 | ALL | | | | |
| G37 | ALL | | | | |
| 130 | ALL | | | | |
| 135 | ALL | | | | |
| M25/M37 | ALL | | | | |
| M35/M45 | ALL | | | | |
| M37/M56 | ALL | | | | |
| M37/M56/M30d | ALL | | | | |
| M45 | ALL | | | | |
| Q45 | ALL | | | | |
| QX4 | ALL | | | | |
| QX56 | ALL | | | | |
| Systemlist | EcuInfo. | ReadCodes | EraseCodes | LiveData | |
| Engine | • | • | • | • | |
| Transmission | • | • | • | • | |
| ABS | • | • | • | • | |
| Air Bag | • | • | • | • | |
| Meter/M&A | • | • | • | • | |
| SUB Meter | • | • | • | • | |
| EPS/DAST 3 | • | • | • | • | |
| Air Pressure Monitor | • | • | • | • | |
| HVAC | • | • | • | • | |
| BCM | • | • | • | • | |
| Motor Control | • | • | • | • | |
| ICC/ADAS | • | • | • | • | |
| All Mode AWD/4WD | • | • | • | • | |
| E-4WD | • | • | • | • | |
| 4WAS (MAIN)/RAS/HICAS | • | • | • | • | |
| 4WAS (Front) | • | • | • | • | |
| Difference Lock | • | • | • | • | |
| CAN Gateway | • | • | • | • | |
| Accele Pedal ACT | • | • | • | • | |
| Brake | • | • | • | • | |
| Chassis Control | • | • | • | • | |
| Adaptive Light | • | • | • | • | |
| Head Lamp Levelizer | • | • | • | • | |
| Auto Drive Position | • | • | • | • | |
| | 1 - | | | | |

| Intelligent Key | • | • | • | • |
|-----------------------|---|---|---|---|
| Smart Entrance | • | • | • | • |
| Auto Slide Door | • | • | • | • |
| Auto Slide Door Right | • | • | • | • |
| Auto Back Door | • | • | • | • |
| Precrash Seatbelt | • | • | • | • |
| Convertible Roof | • | • | • | • |
| EV/HEV | • | • | • | • |
| HV Battery | • | • | • | • |
| Charger/PD Module | • | • | • | • |
| PTC Heater | • | • | • | • |
| Laser/Radar | • | • | • | • |
| Side Radar Left | • | • | • | • |
| Side Radar Right | • | • | • | • |
| Lane Camera | • | • | • | • |
| Rearview Camera | • | • | • | • |
| S/Blind Camera | • | • | • | • |
| Multi Display | • | • | • | • |
| Multi AV | • | • | • | • |
| Sonar | • | • | • | • |
| BSW/Buzzer | • | • | • | • |
| EHS/PKB | • | • | • | • |
| IPDM E/R | • | • | • | • |
| BAC | • | • | • | • |
| DIU | • | • | • | • |
| Shift | • | • | • | • |
| E-SUS | • | • | • | • |
| ANC | • | • | • | • |
| Telematics | • | • | • | • |
| HAS | • | • | • | • |
| AVM | • | • | • | • |
| DAST 1 | • | • | • | • |
| DAST 2 | • | • | • | • |
| Cluster | • | • | • | • |
| PMAS | • | • | • | • |
| Radio | • | • | • | • |
| VSP | • | • | • | • |
| Nats Immu | • | • | • | • |
| Air Levelizer | • | • | • | • |
| Motor Assist | • | • | • | • |
| | | 1 | | |

| | <pre>INFINITI_V01.15 ETC Function List (Note:For reference only)</pre> | | | |
|---|--|-----|--|--|
| NOTES: | | | | |
| ● This function is supported. | | | | |
| * This function may be supported, which depends on the actual condition of the vehicle. | | | | |
| O This function is not supported. | | | | |
| ▲ This function is the new feature in this version. | | | | |
| Vehicle | Years | ETC | | |
| All vehicle | All years | * | | |

| | <pre>INFINITI_V01.15 DPF Function List (Note:For reference only)</pre> | | | |
|---|--|-----|--|--|
| NOTES: | | | | |
| ● This function is supported. | | | | |
| * This function may be supported, which depends on the actual condition of the vehicle. | | | | |
| O This function is not supported. | | | | |
| ▲ This function is the new feature in this version. | | | | |
| Vehicle | Years | DPF | | |
| All vehicle | All years | * | | |

| | <pre>INFINITI_V01.15 INJ Function List (Note:For reference only)</pre> | | | |
|---|--|-----|--|--|
| NOTES: | | | | |
| ● This function is supported. | | | | |
| * This function may be supported, which depends on the actual condition of the vehicle. | | | | |
| O This function is not supported. | | | | |
| ▲ This function is the new feature in this version. | | | | |
| Vehicle | Years | INJ | | |
| All vehicle | All years | * | | |

| INFINITI_VO1. | 15 OIL Function List (Note:For reference only) |
|----------------------------------|---|
| NOTES: | |
| ● This function is supported. | |
| ※ This function may be supported | , which depends on the actual condition of the vehicle. |
| O This function is not supported | |
| ▲ This function is the new featu | re in this version. |
| Vehicle | OIL |
| EX35 | |
| FX35 | • |
| FX45 | • |
| FX50 | • |
| G25 | • |
| G35 | • |
| G37 | |
| M35 | • |
| M37 | • |
| M45 | • |
| M56 | • |
| Q45 | • |
| QX56 | • |

| | <pre>INFINITI_V01.15 SAS Function List (Note:For reference only)</pre> | | | |
|---|--|-----|--|--|
| NOTES: | | | | |
| ● This function is supported. | | | | |
| * This function may be supported, which depends on the actual condition of the vehicle. | | | | |
| O This function is not supported. | | | | |
| ▲ This function is the new feature in this version. | | | | |
| Vehicle | Years | SAS | | |
| All vehicle | All years | * | | |