# CR MAX



# **VOLKSWAGEN**



# VW Diag Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- $\bigcirc$  This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year		
Amarok	2010 - 2019		
Beetle	2003 - 2019		
CC	2009 - 2019		
Caddy	2004 - 2015		
Eos	2006 - 2018		
Fox/CrossFox/Lupo	2004 - 2019		
Gol/Parati/Saveiro/Pointer	1999 - 2015		
Gol/VoYage/Saveiro	2009 - 2017		
Golf	1998 - 2019		
Jetta	2001 - 2019		
Kombi	2006 - 2015		
LT3	-2019		
Lavida	2008 - 2019		
Lupo	1999 - 2006		
New Bora	2008 -		
Novo Gol/VoYage/Saveiro	2013 - 2017		
Passat	1997 - 2019		
Phaeton	2003 - 2017		
Polo	1995 - 2019		
Rabbit	2006 - 2009		
Santana	2001 - 2007		
Scirocco	2009 - 2019		
Sharan	2001 - 2019		
SpaceFox/Space Cross/Suran/Sportvan	2006 - 2019		
T4 Caravelle	2001 - 2003		
Tiguan	2008 - 2019		
Touareg	2003 - 2019		
Touran	2003 - 2019		
Transporter	1997 - 2018		
Up/Cross up	2014 - 2019		
XL1	2013 - 2017		
Constantiat	EcuInfo Read Erase Live Actuation Basic		

Systemlist	Learni o	Codes	Codes	Data	Test	Settings	Adaptation
01 Engine Control Module 1	•	•	•	•	•	•	•
02 Transmission Control Module	•	•	•	•	•	•	•
03 Brakes 1	•	•	•	•	•	•	•
04 Steering Angle Sender	•	•	•	•	•	•	•
05 Kessy	•	•	•	•	•	0	0
06 Seat Adjustment Passenger Side	•	•	•	•	•	0	0
07 Display Control Unit	•	•	•	•	•	0	0
08 Air Conditioning	•	•	•	•	•	•	•
09 Central Electrics	•	•	•	•	•	•	•
OB Auxiliary Air Heater	•	•	•	•	•	0	0
OC Rear Axle Steering 2	•	•	•	•	•	0	0
OD Sliding Door Left	•	•	•	•	•	0	0
OE Media Player Position 1	•	•	•	•	•	0	0
OF Radio Tuner - Digital	•	•	•	•	•	0	0
10 Parking Assistance 2	•	•	•	•	•	0	0
11 Engine Control Module 2	•	•	•	•	•	0	0

12 Clutch Control Unit	• • • •	0	0
13 Adaptive Cruise Control		0	0
14 Wheel Dampening Electronics		0	0
15 Airbag	• • • •		$\overline{\bullet}$
16 Steering Column Electronics	• • • •		
17 Dash Board			
18 Auxiliary Parking Heater	• • • •	0	0
19 Gateway		•	
1A Fuel Cell Engine		0	0
1B Active Steering	• • • •	0	0
1C Vehicle Position Detection		0	0
1D Driver Identification		0	0
1E Media Player Position 2	• • • •	0	0
		0	0
20 High Beam Assistance		0	0
21 Battery Energy Control Module 2			
22 All Wheel Control		0	0
23 Brake Boost		0	0
25 Immobilizer  26 Electronic Roof Control		0	0
	• • •		0
27 Display Control Unit Rear		0	0
28 Climate Control Unit Rear		0	0
29 Light Control Left		0	0
2A Control Unit Wireless Charging	• • •	0	0
2B Steering Column Locking		0	0
2D Voice Amplifier		0	0
2E Media Player Position 3		0	0
30 Special Function 2		0	0
31 Engine Electronics Group		0	0
32 Lock Electronics		0	0
33 All OBD Systems		0	0
34 Ride Control System		0	0
35 Central Locking Control Module		0	0
36 Seat Adjustment Driver Side		0	0
37 Navigation		0	0
38 Roof Electronic Control Module		0	0
39 Light Control Right		0	0
3A Special Vehicle Assistant		0	0
3B Sensor Electronics		0	0
3C Lane Change Assistant ●		0	0
3D Special Function		0	0
3E Media Player Position 4		0	0
3F Dynamic Assembly Mounting		0	0
40 Air Conditioning Compressor		0	0
41 Diesel Pump Electronics	• • • •	0	0
42 Door Electronics Driver Side	• • • •	0	0
43 Bremskraftunterstutzung	• • •	0	0
44 Steering Assistance	• • • •	•	•
45 Interior Monitoring	• • •	0	0
46 Central Module Comfort System	• • • •	•	•
47 Sound System •	• • • •	0	0
48 Seat Adjustment Rear Driver Side	• • •	0	0
4A Rear Light ●	• • • •	0	0
4B Multifunction Module	• • • •	0	0
4C Tire Pressure Monitoring 2		0	0

4D Data Transfer Car2X_XXX	•	•	•	•	•	0	0
4E Control Head Rear Right	•	•	•	•	•	0	0
4F Central Electrics 2	•	•	•	•	•	0	0
50 Seat Adjustment 3rd Row	•	•	•	•	•	0	0
51 Drive Motor Control Module	•	•	•	•	•	0	0
52 Door Electronics Passenger Side	•	•	•	•	•	0	0
53 Parking Brake	•	•	•	•	•	•	•
54 Rear Spoiler	•	•	•	•	•	0	0
55 Headlight Regulation	•		•	•	•	0	0
56 Radio	•	•	•	•	•	0	0
57 TV Tuner	•		•	•	•	0	0
58 Fuel Supply	•	•	•	•	•	0	0
5A Longitudinal Control	•	•	•	•	•	0	0
5B Seat Adjustment Rear Passenger Side	•	•	•	•	•	0	0
5C Lane Departure Warning System	•	•	•	•	•	0	0
5D Operation	•	•	•	•	•	0	0
5E Control Head Rear Left	•		•	•	•	0	0
5F Information Control Unit 1	•	•	•	•	•	0	0
60 Tachograph	•	•	•	•	•	0	0
61 Battery Regulation	•	•	•	•	•	•	•
62 Door Electronics Rear Left	•	•	•	•	•	0	0
63 Entry Assistance Driver Side	•	•	•	•	•	0	0
64 Stabilizers	•	•	•	•	•	0	0
65 Tire Pressure Monitoring 1	•	•	•	•	•	0	0
66 Seat Adjustment Rear	•	•	•	•	•	0	0
67 Voice Control	•	•	•	•	•	0	0
68 Wiper Control Unit	•	•	•	•	•	0	0
69 Trailer Function	•	•	•	•	•	0	0
6A Door Automatic Rear Driver Side	•	•	•	•	•	0	0
6B Aerodynamics Control Unit	•	•	•	•	•	0	0
6C Camera System Rear View	•	•	•	•	•	0	0
6D Deck Lid Control Unit	•	•	•	•	•	0	0
6E Display Control Roof	•	•	•	•	•	0	0
6F Central Module Comfort System 2	•	•	•	•	•	0	0
71 Battery Charger	•	•	•	•	•	0	0
72 Door Electronics Rear Right	•	•	•	•	•	0	0
73 Entry Assistance Passenger Side	•	•	•	•	•	0	0
74 Chassis Control	•	•	•	•	•	0	0
75 Telematics Communication Unit	•	•	•	•	•	0	0
76 Parking Assistance	•	•	•	•	•	•	•
77 Telephone	•	•	•	•	•	0	0
78 Sliding Door Right	•	•	•	•	•	0	0
7A Door Automatic Rear Passenger Side	•	•	•	•	•	0	0
7D Auxiliary Heater	•	•	•	•	•	0	0
7E Dash Board Display Unit	•	•	•	•	•	0	0
7F Information Control Unit 2	•	•	•	•	•	0	0
80 Battery Regulation Auxiliary Accumulator 1	•	•	•	•	•	0	0
81 Gear Shift Control Module	•	•	•	•	•	0	0
82 Head Up Display	•	•	•	•	•	0	0
84 Night Vision	•	•	•	•	•	0	0
85 On-Board Camera	•	•	•	•	•	0	0
87 Lane Assist LT3	•	•	•	•	•	0	0
88 Multi Contour Seat Driver Side	•	•	•	•	•	0	0
89 Multi Contour Seat Passenger Side	•	•	•	•	•	0	0
		-					

SR Multi Contour Seat Rear Priver State				
SE Battery Energy Control Module	8A Multi Contour Seat Rear Driver Side		• 0	0
SE Multi Contour Seat Rear Passenger Side				
SE Image Processing Electronics		-   -	<del>                                     </del>	
SP Pretensioner Front Left			<del>                                     </del>	
90 Pretensioner Front Right 91 Engine Control Module (ECM) 91 Engine Control Module (ECM) 92 Transmission Electronics 93 Immobilizer 94 Airbag (SRS) 95 Electronic Stability Program 96 Instrument Cluster 97 Tachograph 98 Tire Pressure Monitoring 99 Electrical Ignition/starter Switch 99 Remote Control 90 Beriver's Boor Electronics 90 Electronics 90 Electronics 90 Electronics 90 Expressure Monitoring 90 Electronics 90 Expressure Monitoring 91				
91 Engine Control Module (ECM) 92 Transmission Electronics 93 Airbag (SRS) 94 Airbag (SRS) 95 Electronic Stability Program 96 Electronic Stability Program 96 Instrument Cluster 97 Tachograph 98 Tire Pressure Monitoring 99 Electrical Ignition/starter Switch 98 Remote Control 99 Agenetic Space (Stability Program) 90 Electronic Space (Stability Program) 90 Electronic Space (Stability Program) 91 Electronic Space (Stability Program) 92 Electronic Space (Stability Program) 93 Electronic Space (Stability Program) 94 Electronic Space (Stability Program) 95 Electronic Space (Stability Program) 96 Electronic Space (Stability Program) 96 Electronic Space (Stability Program) 97 Electronic Space (Stability Program) 98 Electronic Space (Stability Program) 99 Auxiliary Heater (Fuel) 99 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 91 All Navigation 91 All Navigation 92 All Navigation 93 Electronic Space (Stability Program) 94 Electronic Space (Stability Program) 95 Electronic Space (Stability Program) 96 Electronic Space (Stability Program) 96 Electronic Space (Stability Program) 97 Tachogram Electronic Space (Stability Program) 98 Tire Program Electronic Space (Stability Program) 98 Tire Program Electronic Space (Stability Program) 99 Electronic Read (Roof Control Head) 90 All Navigation (Stability Program) 90 Auxiliary Electronic Space (Stability Program) 90 Auxiliary Display Control Unit 90 Condens Electrical System Control Module 91 Auxiliary Display Control Unit 92 Electronic Roof Control 2 93 Electronic Roof Control Unit 94 Electronic Roof Control 2 95 Auxiliary Display Control Unit		+ • + • •	<del>                                     </del>	
92 Transmission Electronics 93 Immobilizer 94 Airbag (SRS) 95 Electronic Stability Program 96 Instrument Cluster 97 Tachograph 98 Tire Pressure Monitoring 99 Electrical Immition/starter Switch 99 Electrical Immition/starter Switch 99 Electrical Immition/starter Switch 99 Electrical Immition/starter Switch 90 Electronics 91 Electronics 91 Electronics 92 Electronics 93 Electronics 94 Electronics 95 Electronic 96 Electronics 96 Electronics 96 Electronics 96 Electronic 97 Electronic 97 Electronic 98 Electronic 99 Electronic 90 Ele			<del>                                     </del>	
93 Immobilizer 94 Airbag (SRS) 95 Electronic Stability Program 96 Instrument Cluster 97 Tachograph 98 Tire Pressure Monitoring 99 Electrical Ignition/starter Switch 90 Rome Control 90 Electronics 90 Electronics 90 AvX Electronics 90 AvX Electronics 90 AvXiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 91 Auxiliary Heater (Fuel) 92 Avxiliary Heater (Fuel) 93 Avxiliary Heater (Fuel) 94 Auxiliary Heater (Fuel) 95 Avxiliary Heater (Fuel) 96 Auxiliary Heater (Fuel) 97 Farking Heater, Water 98 Auxiliary Heater (Fuel) 98 Auxiliary Heater (Fuel) 99 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 91 Auxiliary Heater (Fuel) 92 Auxiliary Heater (Fuel) 93 Auxiliary Heater (Fuel) 94 Auxiliary Heater (Fuel) 95 Auxiliary Heater (Fuel) 96 Auxiliary Heater (Fuel) 97 Farking Heater, Water 98 Auxiliary Heater (Fuel) 99 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 91 Auxiliary Heater (Fuel) 92 Auxiliary Heater (Fuel) 93 Auxiliary Heater (Fuel) 94 Auxiliary Heater (Fuel) 95 Auxiliary Display/control Hodule 95 Auxiliary Display Control Unit 96 Auxiliary Display Control Unit 96 Auxiliary Display Control Unit 97 Auxiliary Display Control Unit			<del>                                     </del>	
94 Airbag (SRS) 95 Electronic Stability Program 96 Instrument Cluster 97 Tachograph 98 Fire Pressure Monitoring 99 Electrical Ignition/starter Switch 99 Electronics 99 Electronics 99 Electronics 90 Electronics 90 Electronics 90 Auxiliary Beater (Fuel) 91 Electronics 90 Auxiliary Heater (Fuel) 91 Electronics 92 Electronics 93 Electronics 94 Electronics 95 Electronics 96 Electronics 97 Electronics 98 Electronics 99 Electronics 90 Electronics 90 Electronics 90 Electronics 90 Electronics 90 Electronics 91 Electronics 91 Electronics 92 Electronics 93 Electronics 94 Electronics 95 Electronics 96 Electronics 97 Electronics 98 Electronics 99 Electronics 99 Electronics 90 Electroni				0
95 Electronic Stability Program 96 Instrument Cluster 97 Tachograph 98 Jire Pressure Monitoring 98 Electrical Ignition/starter Switch 98 Remote Control 98 Electronics 98 Electronics 90 AR Control 99 Electronics 90 Availiary Heater (Fuel) 90 Auxiliary Heater (Fuel) 91 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 91 Auxiliary Heater (Electric) 94 Auxiliary Heater (Electric) 95 Farking Heater, Water 96 Auxiliary Heater (Electric) 96 Aviliary Heater (Electric) 97 Auxiliary Heater (Electric) 98 Auxiliary Heater (Electric) 99 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 91 Auxiliary Heater (Electric) 92 Auxiliary Heater (Electric) 93 Auxiliary Heater (Electric) 94 Auxiliary Heater (Electric) 95 Auxiliary Heater (Electric) 96 Auxiliary Heater (Electric) 96 Auxiliary Heater (Electric) 96 Auxiliary Heater (Electric) 97 Auxiliary Heater (Electric) 98 Auxiliary Heater (Electric) 99 Auxiliary Display Control Unit 90 Auxiliary Display Control Unit	93 Immobilizer •		<del> </del>	
96 Instrument Cluster 97 Tachograph 98 Tire Pressure Monitoring 99 Electrical Ignition/starter Switch 99 Electrical Ignition/starter Switch 90 A Remote Control 90 Electronics 90 A Carlo Electronics 90 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Electric) 91 Auxiliary Heater (Electric) 92 Auxiliary Heater (Electric) 93 Auxiliary Heater (Electric) 94 Auxiliary Heater (Electric) 95 Auxiliary Heater (Electric) 96 Auxiliary Heater (Electric) 97 Auxiliary Heater (Electric) 98 Auxiliary Heater (Electric) 99 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 91 Auxiliary Heater (Electric) 92 Auxiliary Heater (Electric) 93 Auxiliary Heater (Electric) 94 Auxiliary Heater (Electric) 95 Auxiliary Heater (Electric) 96 Auxiliary Heater (Electric) 97 Auxiliary Heater (Electric) 98 Auxiliary Heater (Electric) 99 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 91 Auxiliary Heater (Electric) 92 Auxiliary Heater (Electric) 93 Auxiliary Display Control Unit 94 Auxiliary Display Control Unit 95 Auxiliary Display Control Unit 96 Steering Column Jacket Switch Module 96 Steering Column Jacket Switch Module 97 Auxiliary Display Control Unit 98 Belectronic Roof Control 2	94 Airbag (SRS)		<del>                                     </del>	
97 Tachograph 98 Tire Pressure Monitoring 99 Electrical Ignition/starter Switch 99 Electrical Ignition/starter Switch 99 Electronic Ignition/starter Switch 90 Electronics 90 Electronic Electronic Electronic 90 Electronic E	95 Electronic Stability Program	• •		
98 Tire Pressure Monitoring 99 Electrical Ignition/starter Switch 98 Remote Control 98 Driver's Door Electronics 90 C A/C Electronics 90 Ak A Electronics 90 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Fuel) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 91 Parking Heater, Water 10 A A Audio 5 Radio, 11 Navigation 12 CD Changer 13 Telephone 14 September 15 Communication Interface 15 A External Communication Interface 16 AB External Communication Interface 17 Infotainment Interface 18 AB Wheel Brake Rear Right 18 Wheel Brake Rear Right 19 AB Wheel Brake Rear Left 19 AC Reductant Control Module 19 AD Sensors Brake Systems 10 AC Reductant Control Head (Roof Control Head) 10 BC Roof Display/control Head (Roof Control Head) 10 BC Roof Display/control Head (Roof Control Module 10 BC Roof Display/control Head (Roof Control Module 10 BC Programmable Special Module 10 BC Programmable Special Module 10 BC Steering Column Jacket Switch Module 10 BC Steering Column Jacket Switch Module 10 BC Roof Display/control Roof Control 2 10 BC Auxiliary Display Control Unit 10 BC BC Steering Column Jacket Switch Module 10 BC Steering Column Jacket Switch Module 10 BC Steering Column Jacket Switch Module 10 BC Access Startsystem Interface	96 Instrument Cluster •	• •	• 0	0
99 Electrical Ignition/starter Switch 90 Remote Control 90 Driver's Door Electronics 90 Availiary Beater (Fuel) 90 E Auxiliary Heater (Electric) 90 Auxiliary Heater (Electric) 91 E Auxiliary Heater (Electric) 91 E Auxiliary Heater (Electric) 92 F Parking Heater, Water 93 A O Audio 5 Radio, 94 Al Navigation 95 As Telephone 96 As Telephone 97 As Telephone 98 As Front Sensors Driver Assistance System 99 As Telephone 99 As Telephone 90 As Telephone 90 As Telephone 91 As Telephone 92 As Telephone 93 As Telephone 94 As Telephone 95 As Telephone 96 As Telephone 97 As Telephone 98 As Telephone 99 As Telephone 99 As Telephone 99 As Telephone 90 As Telephone 90 As Telephone 90 As Telephone 91 As Telephone 92 As Telephone 93 As Telephone 94 As Telephone 95 As Telephone 96 As Telephone 97 As Telephone 98 As Telephone 99 As Telephone 99 As Telephone 90 As Telephone 90 As Telephone 90 As Telephone 91 As Telephone 91 As Telephone 92 As Telephone 93 As Telephone 94 As Telephone 95 Brake Systems 96 97 Access Startsystem Control Module 96 As Telephone 96 As Telephone 97 Access Startsystem Interface 98 Availiary Display Control Lint 98 Belectronic Roof Control 2	97 Tachograph ●	• •	• 0	0
9A Remote Control  9B Driver's Door Electronics  9C A/C Electronics  9D Auxiliary Heater (Fuel)  9E Auxiliary Heater (Electric)  9F Parking Heater, Water  A0 Audio 5 Radio,  A1 Navigation  A2 CD Changer  A3 Telephone  A5 Front Sensors Driver Assistance System  A6 Microphone Control Unit  A7 Infotainment Interface  A8 External Communication Interface  A9 Actuator For Structure-Borne Sound  A8 Wheel Brake Rear Right  A8 Wheel Brake Rear Right  A8 Wheel Brake Rear Left  AC Reductant Control Module  AD Sensors Brake Systems  AC Telemetry Diagnostic Control Unit  B0 Roof Display/control Head (Roof Control Head)  B1 Upper Operating Field  B2 Parking Aid  B3 Trailer Function  B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B9 Auxiliary Display Control Unit  C0 C	98 Tire Pressure Monitoring	• • •	• 0	0
9B Driver's Door Electronics 9C A/C Electronics 9D Auxiliary Heater (Fuel) 9D Auxiliary Heater (Electric) 9F Parking Heater, Water 9F Parking Alio 9F Parking Heater (Electrical) 9F Parking Alio 9F Parking Al	99 Electrical Ignition/starter Switch		• 0	0
9C A/C Electronics	9A Remote Control ●		• 0	0
9D Auxiliary Heater (Fuel) 9E Auxiliary Heater (Electric) 9F Parking Heater, Water 0	9B Driver's Door Electronics		• 0	0
9E Auxiliary Heater (Electric)	9C A/C Electronics ●	• • •	• 0	0
9F Parking Heater, Water  A0 Audio 5 Radio, A1 Navigation A2 CD Changer A3 Telephone A5 Front Sensors Driver Assistance System A6 Microphone Control Unit A7 Infotainment Interface A8 External Communication Interface A9 Actuator For Structure-Borne Sound A8 Wheel Brake Rear Right A6 Wheel Brake Rear Left AC Reductant Control Module AD Sensors Brake Systems AE Telemetry Diagnostic Control Unit B1 Upper Operating Field B2 Parking Aid B3 Trailer Function B4 Vehicle Electrical System Control Module B5 Programmable Special Module B6 Steering Column Jacket Switch Module B7 Access Startsystem Interface B8 Electronic Roof Control Unit B9 Auxiliary Display Control Unit B0 Q0 Auxiliary Display Control Unit B0 Q0 Auxiliary Display Control Unit B0 Q0 Auxiliary Display Control Unit B1 Q0	9D Auxiliary Heater (Fuel)	• • •	• 0	0
A0 Audio 5 Radio, A1 Navigation A2 CD Changer A3 Telephone A5 Front Sensors Driver Assistance System A6 Microphone Control Unit A7 Infotainment Interface A8 External Communication Interface A9 Actuator For Structure-Borne Sound A6 Wheel Brake Rear Right A7 Reductant Control Module A7 Sensors Brake System A8 Systems A9 Actuator For Structure-Borne Sound A8 Wheel Brake Rear Left A9 Sensors Brake Systems A1 Sensors Brake Systems A2 Sensors Brake Systems A3 Telephone A4 Wheel Brake Rear Left A5 Sensors Brake Systems A6 Sensors Brake Systems A6 Wheel Brake Rear Left A7 Sensors Brake Systems A8 Sensors Brake Systems A9	9E Auxiliary Heater (Electric)	• • •	• 0	0
A0 Audio 5 Radio, A1 Navigation A2 CD Changer A3 Telephone A5 Front Sensors Driver Assistance System A6 Microphone Control Unit A7 Infotainment Interface A8 External Communication Interface A9 Actuator For Structure-Borne Sound AA Wheel Brake Rear Right AC Reductant Control Module AC Reductant Control Module B0 Roof Display/control Head (Roof Control Head) B1 Upper Operating Field B2 Parking Aid B3 Trailer Function B4 Vehicle Electrical System Control Module B6 Steering Column Jacket Switch Module B7 Access Startsystem Interface B8 Electronic Roof Control 2 B9 Auxiliary Display Control Unit B0 Roof Control 2 B9 Auxiliary Display Control Unit B0 Roof Control 2 B9 Auxiliary Display Control Unit	9F Parking Heater, Water	• •	• 0	0
A2 CD Changer  A3 Telephone  A5 Front Sensors Driver Assistance System  A6 Microphone Control Unit  A7 Infotaliment Interface  A8 External Communication Interface  A9 Actuator For Structure-Borne Sound  A0 Wheel Brake Rear Right  A0 CReductant Control Module  A0 Sensors Brake Systems  AE Telemetry Diagnostic Control Unit  B0 Roof Display/control Head (Roof Control Head)  B1 Upper Operating Field  B2 Parking Aid  B3 Trailer Function  B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  C C C C C C C C C C C C C C C C C C C		• • •	• 0	0
A2 CD Changer  A3 Telephone  A5 Front Sensors Driver Assistance System  A6 Microphone Control Unit  A7 Infotaliment Interface  A8 External Communication Interface  A9 Actuator For Structure-Borne Sound  A4 Wheel Brake Rear Right  A6 Wheel Brake Rear Left  A7 Reductant Control Module  A8 External Communication  A8 Wheel Brake Romer Left  A7 Reductant Control Module  A8 Wheel Brake Romer Left  A8 Wheel Brake Romer Left  A9 Actuator For Structure-Borne Sound  A8 Wheel Brake Romer Left  A9 Actuator Control Module  A9 Actuator Control Module  A9 Actuator Control Module  A9 Actuator Systems  A6 Wheel Brake Romer Left  A7 Reductant Control Module  A8 Wheel Brake Romer Left  A8 Wheel Brake Romer Left  A9 Actuator Control Module  A9 Actuator Systems  A1 Wheel Brake Romer Left  A8 Wheel Brake Romer Left  A9 Actuator For Structure-Borne Sound  A8 Wheel Brake Romer Left  A9 Actuator For Structure-Borne Sound  A9 Wheel Brake Romer Left  A0 Wheel Brake Romer Left  A		• • •		
A3 Telephone  A5 Front Sensors Driver Assistance System  A6 Microphone Control Unit  A7 Infotainment Interface  A8 External Communication Interface  A9 Actuator For Structure-Borne Sound  AM Wheel Brake Rear Right  AB Wheel Brake Rear Left  AC Reductant Control Module  AD Sensors Brake Systems  AE Telemetry Diagnostic Control Unit  B0 Roof Display/control Head (Roof Control Head)  B1 Upper Operating Field  B2 Parking Aid  B3 Trailer Function  B4 Vehicle Electrical System Control Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B		• • •	• 0	0
A5 Front Sensors Driver Assistance System  A6 Microphone Control Unit  A7 Infotainment Interface  A8 External Communication Interface  A9 Actuator For Structure-Borne Sound  AA Wheel Brake Rear Right  AB Wheel Brake Rear Left  AC Reductant Control Module  AD Sensors Brake Systems  AE Telemetry Diagnostic Control Unit  B0 Roof Display/control Head (Roof Control Head)  B1 Upper Operating Field  B2 Parking Aid  B3 Trailer Function  B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control Unit  B9 Auxiliary Display Control Unit  C C C C C C C C C C C C C C C C C C C		• • •	<del>                                     </del>	
A6 Microphone Control Unit       Image: Control Unit of the Control Control Unit of the Control Contro		• • •	<del> </del>	
A7 Infotainment Interface       • • • • • • • • • • • • • • • • • • •		0 0		
A8 External Communication Interface       ●       ●       ●       ●       ○       ○         A9 Actuator For Structure-Borne Sound       ●       ●       ●       ●       ●       ○       ○         AA Wheel Brake Rear Right       ●       ●       ●       ●       ●       ○       ○         AB Wheel Brake Rear Left       ●       ●       ●       ●       ●       ○       ○         AC Reductant Control Module       ●       ●       ●       ●       ●       ○       ○         AD Sensors Brake Systems       ●       ●       ●       ●       ●       ○       ○         AE Telemetry Diagnostic Control Unit       ●       ●       ●       ●       ●       ○       ○         AE Telemetry Diagnostic Control Unit       ●       ●       ●       ●       ●       ○       ○         AE Telemetry Diagnostic Control Head (Roof Control Head)       ●       ●       ●       ●       ●       ●       ○       ○         BE Parking Aid       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●       ●				
A9 Actuator For Structure-Borne Sound       ●			<del>                                     </del>	
AA Wheel Brake Rear Right  AB Wheel Brake Rear Left  AC Reductant Control Module  AD Sensors Brake Systems  AE Telemetry Diagnostic Control Unit  BO Roof Display/control Head (Roof Control Head)  BI Upper Operating Field  BI Upper Operating Field  BI Trailer Function  B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control Unit  B				
AB Wheel Brake Rear Left       • • • • • • • • • • • • • • • • • • •				
AC Reductant Control Module  AD Sensors Brake Systems  AE Telemetry Diagnostic Control Unit  BO Roof Display/control Head (Roof Control Head)  BO Roof Display/control Module  BO Roof Display/control Mod			<del>                                     </del>	
AD Sensors Brake Systems  AE Telemetry Diagnostic Control Unit  BO Roof Display/control Head (Roof Control Head)  B1 Upper Operating Field  B2 Parking Aid  B3 Trailer Function  B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B		+ - +	<del>                                     </del>	
AE Telemetry Diagnostic Control Unit  BO Roof Display/control Head (Roof Control Head)  B1 Upper Operating Field  B2 Parking Aid  B3 Trailer Function  B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B			<del>                                     </del>	
BO Roof Display/control Head (Roof Control Head)  B1 Upper Operating Field  B2 Parking Aid  B3 Trailer Function  B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B				
B1 Upper Operating Field  B2 Parking Aid  B3 Trailer Function  B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B		+ - +	<del>                                     </del>	
B2 Parking Aid         • • • • • • • • • • • • • • • • • • •			<del>                                     </del>	
B3 Trailer Function B4 Vehicle Electrical System Control Module B5 Programmable Special Module B6 Steering Column Jacket Switch Module B7 Access Startsystem Interface B8 Electronic Roof Control 2 B9 Auxiliary Display Control Unit B0 C C C C C C C C C C C C C C C C C C C				
B4 Vehicle Electrical System Control Module  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B0 D D D D D D D D D D D D D D D D D D D		+ - +	<del>                                     </del>	
B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B5 Programmable Special Module  B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B9 O			<del> </del>	
B6 Steering Column Jacket Switch Module  B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B0 C C C C C C C C C C C C C C C C C C C			<del>                                     </del>	
B7 Access Startsystem Interface  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B7 Access Startsystem Interface  B9 Auxiliary Display Control Unit  B9 Auxiliary Display Control Unit  B7 Access Startsystem Interface  B9		+ • + • + •	<del>                                     </del>	
B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B8 Electronic Roof Control 2  B9 Auxiliary Display Control Unit  B9 Auxiliary Display Control Unit  B9 Auxiliary Display Control Unit		<del>                                     </del>	<del>                                     </del>	1
B9 Auxiliary Display Control Unit		<del>                                     </del>		
		<del>                                     </del>	<del> </del>	
BA Assembly Mounting	· · · · · · · · · · · · · · · · · · ·		<del>                                     </del>	
			<del>                                     </del>	
BB Door Electronics Rear Driver Side	<u> </u>		<del>                                     </del>	
BC Door Electronics Rear Passenger Side				
BD High Voltage Battery Charge Management • • • • • O O				
BE Sliding Door Rear Left	BE Sliding Door Rear Left	• • •	• 0	0
BF Sliding Door Rear Right	BF Sliding Door Rear Right	• • •	• 0	0
CO Actuator For Exterior Noise	CO Actuator For Exterior Noise	• • •	• 0	0
C1 Battery Regulation        O O	C1 Battery Regulation		• 0	0

C2 Transmission Control Module 2	0	0
C3 Drive Motor Control Module 3	0	0
C4 DC/DC Converter Control Module	0	0
C5 Thermal Management • • • •	0	0
C6 Battery Charger Control Module	0	0
C7 Pedestrian Protection	0	0
C8 Auxiliary Display Control Unit 2	0	0
C9 Rear Mirror	0	0
CA Control Module For Sunroof	0	0
CB Rear Axle Steering	0	0
CC Starter / Generator Control Module	0	0
CD Laser Scanner	0	0
CE Drive Motor Control Module 2	0	0
CF Control Unit Lane Change Assistant 2	0	0
DO Front Axle Lift System	0	0
D1 Center Display • • • •	0	0
D2 Sliding Door Left	0	0
D3 Sliding Door Right	0	0
D4 Roll Control System 1	0	0
D5 Roll Control System 2	0	0
D6 Light Control Left 2	0	0
D7 Light Control Right 2	0	0
D8 Projection Module in Left Matrix Headlamp	0	0
D9 Projection Module in Right Matrix Headlamp	0	0
DB Front Corner Radar 1	0	0
DC Front Corner Radar 2	0	0
DD Control Module 2 For Sunroof	0	0
DE Charger 1 Mobile Devices	0	0
DF Charger 2 Mobile Devices	0	0
EO Auxiliary Display Control Unit 1	0	0
EF Reference Control Unit	0	0

# VW OIL Function List (Note: For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year	OIL
Amarok	2010 - 2019	•
Beetle	2003 - 2019	•
CC	2009 - 2019	•
Caddy	2004 - 2015	•
Eos	2006 - 2018	•
Fox/CrossFox/Lupo	2004 - 2019	•
Gol/Parati/Saveiro/Pointer	1999 - 2015	•
Gol/VoYage/Saveiro	2009 - 2017	•
Golf	1998 - 2019	•
Jetta	2001 - 2019	•
Lavida	2008 - 2019	•
Lupo	1999 - 2006	•
New Bora	2008 -	•
Novo Gol/VoYage/Saveiro	2013 - 2017	•
Passat	1997 - 2019	•
Phaeton	2003 - 2017	•
Polo	1995 - 2019	•
Santana	2001 - 2007	•
Scirocco	2009 - 2019	•
Sharan	2001 - 2019	•
SpaceFox/Space Cross/Suran/Sportvan	2006 - 2019	•
Tiguan	2008 - 2019	•
Touareg	2003 - 2019	•
Touran	2003 - 2019	•
Transporter	1997 - 2018	•
Up/Cross up	2014 - 2019	•

OIL Function List

Adapting Vehicle To Fixed Interval

Adapting Vehicle To Flexible Service Interval

# VW BMS Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year	BMS
Amarok	2010 - 2019	•
Beetle	2003 - 2019	•
CC	2009 - 2019	•
Caddy	2004 - 2015	•
Eos	2006 - 2018	•
Gol/Parati/Saveiro/Pointer	1999 - 2015	•
Gol/VoYage/Saveiro	2009 - 2017	•
Golf	1998 - 2019	•
Jetta	2001 - 2019	•
Lavida	2008 - 2019	•
New Bora	2008 -	•
Passat	1997 - 2019	•
Phaeton	2003 - 2017	•
Polo	1995 - 2019	•
Scirocco	2009 - 2019	•
Sharan	2001 - 2019	•
SpaceFox/Space Cross/Suran/Sportvan	2006 - 2019	•
Tiguan	2008 - 2019	•
Touareg	2003 - 2019	•
Touran	2003 - 2019	•
Transporter	1997 - 2018	•
Up/Cross up	2014 - 2019	•
DM		

### BMS Function List

Configure new battery parameter

# VW DPF Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- X This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year	DPF
Golf	1998 - 2019	•
Passat	1997 - 2019	•
Phaeton	2003 - 2017	•
Scirocco	2009 - 2019	•
Tiguan	2008 - 2019	•
Touareg	2003 - 2019	•

### DPF Function List

DPF Check

DPF Matching

DPF Regeneration

## VW EPB Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year	EPB
Amarok	2010 - 2019	•
Beetle	2003 - 2019	•
CC	2009 - 2019	•
Caddy	2004 - 2015	•
Eos	2006 - 2018	•
Fox/CrossFox/Lupo	2004 - 2019	•
Gol/Parati/Saveiro/Pointer	1999 - 2015	•
Gol/VoYage/Saveiro	2009 - 2017	•
Golf	1998 - 2019	•
Jetta	2001 - 2019	•
Lavida	2008 - 2019	•
Lupo	1999 - 2006	•
New Bora	2008 -	•
Novo Gol/VoYage/Saveiro	2013 - 2017	•
Passat	1997 - 2019	•
Phaeton	2003 - 2017	•
Polo	1995 - 2019	•
Santana	2001 - 2007	•
Scirocco	2009 - 2019	•
Sharan	2001 - 2019	•
SpaceFox/Space Cross/Suran/Sportvan	2006 - 2019	•
Tiguan	2008 - 2019	•
Touareg	2003 - 2019	•
Touran	2003 - 2019	•
Transporter	1997 - 2018	•
Up/Cross up	2014 - 2019	•

#### **EPB Function List**

Open Rear Brake Calipers(Ready to change brake pads)

Close Rear Brake Calipers(After replacement of brake pads)

Brake Calipers Function Test

Brake Pads Thickness Input

Put the brake pads in the installation position

Checking the basic setting of parking braking

Hand brake pad running-in

Hand brake calibration

# VW ETC Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- ▲ This function is the new feature in this version.

Vehicle	Year	ETC		
Amarok	2010 - 2019	•		
Beetle	2003 - 2019	•		
CC	2009 - 2019	•		
Caddy	2004 - 2015	•		
Eos	2006 - 2018	•		
Fox/CrossFox/Lupo	2004 - 2019	•		
Gol/Parati/Saveiro/Pointer	1999 - 2015	•		
Gol/VoYage/Saveiro	2009 - 2017	•		
Golf	1998 - 2019	•		
Jetta	2001 - 2019	•		
Lavida	2008 - 2019	•		
Lupo	1999 - 2006	•		
New Bora	2008 -	•		
Novo Gol/VoYage/Saveiro	2013 - 2017	•		
Passat	1997 - 2019	•		
Phaeton	2003 - 2017	•		
Polo	1995 - 2019	•		
Santana	2001 - 2007	•		
Scirocco	2009 - 2019	•		
Sharan	2001 - 2019	•		
SpaceFox/Space Cross/Suran/Sportvan	2006 - 2019	•		
Tiguan	2008 - 2019	•		
Touareg	2003 - 2019	•		
Touran	2003 - 2019	•		
Transporter	1997 - 2018	•		
Up/Cross up	2014 - 2019	•		
ETC Function List				

Electronic throttle sensor reset

# VW INJ Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year	INJ	
Golf	1998 - 2019	•	
Passat	1997 - 2019	•	
Phaeton	2003 - 2017	•	
Scirocco	2009 - 2019	•	
Tiguan	2008 - 2019	•	
Touareg	2003 - 2019	•	
THE			

#### INJ Function List

Injector matching

# VW SAS Function List (Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year	SAS
Amarok	2010 - 2019	•
Beetle	2003 - 2019	•
CC	2009 - 2019	•
Caddy	2004 - 2015	•
Eos	2006 - 2018	•
Fox/CrossFox/Lupo	2004 - 2019	•
Gol/Parati/Saveiro/Pointer	1999 - 2015	•
Gol/VoYage/Saveiro	2009 - 2017	•
Golf	1998 - 2019	•
Jetta	2001 - 2019	•
Lavida	2008 - 2019	•
Lupo	1999 - 2006	•
New Bora	2008 -	•
Novo Gol/VoYage/Saveiro	2013 - 2017	•
Passat	1997 - 2019	•
Phaeton	2003 - 2017	•
Polo	1995 - 2019	•
Santana	2001 - 2007	•
Scirocco	2009 - 2019	•
Sharan	2001 - 2019	•
SpaceFox/Space Cross/Suran/Sportvan	2006 - 2019	•
Tiguan	2008 - 2019	•
Touareg	2003 - 2019	•
Touran	2003 - 2019	•
Transporter	1997 - 2018	•
Up/Cross up	2014 - 2019	•

SAS Function List

Steering Angle Learning

# VW SPS Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year	SPS
Amarok	2010 - 2019	*
Beetle	2003 - 2019	*
CC	2009 - 2019	*
Caddy	2004 - 2015	*
Eos	2006 - 2018	*
Fox/CrossFox/Lupo	2004 - 2019	*
Gol/Parati/Saveiro/Pointer	1999 - 2015	*
Gol/VoYage/Saveiro	2009 - 2017	*
Golf	1998 - 2019	*
Lupo	1999 - 2006	*
Novo Gol/VoYage/Saveiro	2013 - 2017	*
Passat	1997 - 2019	*
Phaeton	2003 - 2017	*
Scirocco	2009 - 2019	*
Sharan	2001 - 2019	*
SpaceFox/Space Cross/Suran/Sportvan	2006 - 2019	*
Tiguan	2008 - 2019	*
Touareg	2003 - 2019	*
Touran	2003 - 2019	*
Transporter	1997 - 2018	*
Up/Cross up	2014 - 2019	*
O.D.		

SPS Function List

Air Suspension Matching

# VW LAP Function List(Note:For reference only)

#### NOTES:

- This function is supported.
- \* This function may be supported, which depends on the actual condition of the vehicle.
- O This function is not supported.
- lacktriangle This function is the new feature in this version.

Vehicle	Year	LAP
Amarok	2010 - 2019	*
Beetle	2003 - 2019	*
CC	2009 - 2019	*
Caddy	2004 - 2015	*
Eos	2006 - 2018	*
Fox/CrossFox/Lupo	2004 - 2019	*
Gol/Parati/Saveiro/Pointer	1999 - 2015	*
Gol/VoYage/Saveiro	2009 - 2017	*
Golf	1998 - 2019	*
Lavida	2008 - 2019	*
Lupo	1999 - 2006	*
New Bora	2008 -	*
Novo Gol/VoYage/Saveiro	2013 - 2017	*
Passat	1997 - 2019	*
Phaeton	2003 - 2017	*
Polo	1995 - 2019	*
Santana	2001 - 2007	*
Scirocco	2009 - 2019	*
Sharan	2001 - 2019	*
SpaceFox/Space Cross/Suran/Sportvan	2006 - 2019	*
Tiguan	2008 - 2019	*
Touareg	2003 - 2019	•
Touran	2003 - 2019	*
Transporter	1997 - 2018	*
Up/Cross up	2014 - 2019	*

LAP Function List

Headlamp Adjustment